



CERTIFICATION by CUSTODIAN of RECORDS
Tucson Police Department Crime Laboratory

T34
6.3.2008

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-001108 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 5-28-08 Cal 1 0.103 AC Cal 2 0.102 AC

Between the dates of 5-28-08 and 5-28-08 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on 11/1.
The instrument was returned to service on N/A.


Clare Conley

Clare L. Conley

6.3.08

ADPS QAS Permit # 33314

SUBSCRIBED AND SWORN to before me this 3, day of June, 2008.

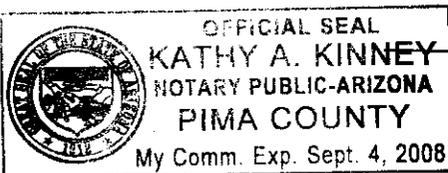

Kathy A Kinney
Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

1 of 7
en

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

TS4
6-3-2008

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Clare Conley AGENCY Tucson Police Department

DATE 5-28-08 TIME 1514

INTOXILYZER SERIAL # 80-001108 LOCATION Crime Lab

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 102 AC

Instrument is operating properly and accurately. YES NO

COMMENTS None.

SIGNATURE Clare Conley

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-001108
05/28/2008

15:16:19

2667
en
TSH

Standard Lot#: 725402I
Last Changed By: S. CIONE #50616

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:17:11
Diagnostic Test	Pass	15:17:38
Air Blank	0.000	15:18:06
0.100 Cal Check	0.103	15:18:24
Air Blank	0.000	15:18:54
Subject Test	0.000	15:19:14
Air Blank	ABT*	15:19:21
Air Blank	0.000	15:19:49

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-001108
05/28/2008

15:19:54

3-67
CW
754

Standard Lot#: 725402I
Last Changed By: S. CIONE #50616

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	15:20:42
Air Blank	IPS**	15:20:52

*RFI Detect
**Improper Sample

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-001108
05/28/2008

15:21:08

4567
CR

TS4

Standard Lot#: 725402I
Last Changed By: S. CIONE #50616

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:22:13
Diagnostic Test	Pass	15:22:41
Air Blank	0.000	15:23:08
0.100 Cal Check	0.103	15:23:27
Air Blank	0.000	15:23:56
Subject Test	0.197*	15:27:05
Air Blank	0.000	15:27:37
Air Blank	0.000	15:28:04
Subject Test	XXX**	15:28:41
Air Blank	0.000	15:29:15

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: ARIZONA
Serial Number: 80-001108
05/28/2008 15:29:41

5067
cu

Standard Lot#: 725402I
Last Changed By: S. CIONE #50616

TS4

QAS: C. CONLEY #34517
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	15:30:08
Cal Check	0.102	15:30:27
Air Blank	0.000	15:30:57

C. Conley

Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

6-67
CM

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

TS4
6-3-08

QA Specialist Clare Conley AGENCY Tucson Police Department
DATE 5-28-08 TIME 1514
Intoxilyzer Serial # 80-001108 Location Crime Lab

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 103 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Clare Conley

DPS Form Exh G-2 (Rev. 05-01)

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: ARIZONA
Serial Number: 80-001108
05/28/2008 15:14:08

7507
CN

Standard Lot#: 725402I
Last Changed By: S. CIONE #50616

BY

QAS: C. CONLEY #34517
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	15:14:35
Cal Check	0.103	15:14:54
Air Blank	0.000	15:15:23

Clare Conley
Operator's Signature