



CERTIFICATION by CUSTODIAN of RECORDS  
 Tucson Police Department Crime Laboratory  
 1306 W. Miracle Mile, Tucson, AZ 85705

TS4  
 5-7-2015

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-002345 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 5-1-2015 Cal 1 0.101 AC Cal 2 0.100 AC

Between the dates of 4-1-2015 and 5-1-2015 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on —.  
 The instrument was returned to service on —.


*Amy L. Autret*  
 Amy L. Autret

5-5-2015

ADPS QAS Permit # 33718

SUBSCRIBED AND SWORN to before me this 5<sup>th</sup>, day of May, 2015.

*Elma Escarcega*

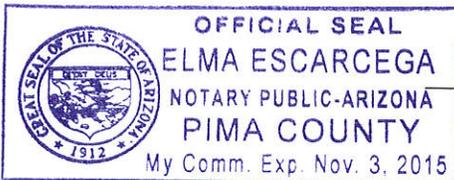

Notary Public

\*Includes documents specified in A.A.C. R13-10-104.A.5

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

1 of 7  
DJA

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

TJH  
5.7-2015

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Amy Autret 53545 AGENCY Tucson Police Department

DATE 5-1-2015 TIME 1113

INTOXILYZER SERIAL # 80-002345 LOCATION 000

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS


- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 100 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE

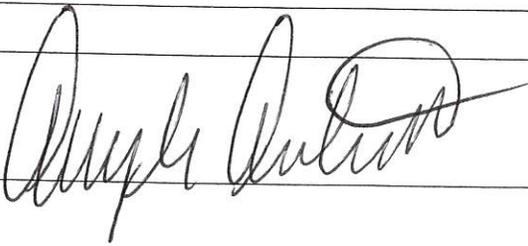

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
05/01/2015

11:16:26

2 of 7  
AS

TS

---

Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546

---

QAS: A. AUTRET #53546  
TUCSON PD

---

Operator: A. AUTRET #53546  
TUCSON PD

---

Subject: SQAP, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	11:17:23
Diagnostic Test	Pass	11:17:58
Air Blank	0.000	11:18:26
0.100 Cal Check	0.100	11:18:46
Air Blank	0.000	11:19:16
Subject Test	0.000	11:19:37
Air Blank	0.000	11:20:05
Wait	ABT*	
Air Blank	0.000	11:20:40

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
05/01/2015 11:21:02

3 of 7  
AS  
B4

---

Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546

---

QAS: A. AUTRET #53546  
TUCSON PD

---

Operator: A. AUTRET #53546  
TUCSON PD

---

Subject: SQAP, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	11:22:00
Diagnostic Test	Pass	11:22:35
Air Blank	0.000	11:23:03
0.100 Cal Check	RFI*	11:23:15
Air Blank	IPS**	11:23:23

\*RFI Detect  
\*\*Improper Sample

**Not a Successfully Completed Test Sequence**

Pursuant to section 23-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

4 of 7  
AA

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
05/01/2015 11:23:42

TJ

Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546

QAS: A. AUTRET #53546  
TUCSON PD

Operator: A. AUTRET #53546  
TUCSON PD

Subject: SQAP, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	11:24:38
Diagnostic Test	Pass	11:25:13
Air Blank	0.000	11:25:40
0.100 Cal Check	0.101	11:26:01
Air Blank	0.000	11:26:31
Subject Test	0.200*	11:29:38
Air Blank	0.000	11:30:10
Air Blank	0.000	11:30:38
Subject Test	XXX**	11:30:58
Air Blank	0.000	11:31:32

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

05/01/2015

11:32:06

-----  
Standard Lot#: 25414100A4

Last Changed By: A. AUTRET #53546  
-----

QAS: A. AUTRET #53546

TUCSON PD  
-----

Operator: A. AUTRET #53546

TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	11:32:35
0.100 Cal Check	0.100	11:32:56
Air Blank	0.000	11:33:25

Preventative Maintenance  
Performed -- Timer Reset

5 of 7  
JLD

TJ

EXHIBIT G-2

leaf 7  
[Signature]

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

TSy  
5.7.2015

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Amy Autret 53545 AGENCY Tucson Police Department  
DATE 5-1-2015 TIME 1113  
Intoxilyzer Serial # 80-002345 Location 000

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 101 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
05/01/2015 11:13:59

2 of 7  
*AS*

*TSy*

-----  
Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546  
-----

QAS: A. AUTRET #53546  
TUCSON PD  
-----

Operator: A. AUTRET #53546  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	11:14:30
0.100 Cal Check	0.101	11:14:50
Air Blank	0.000	11:15:20

Preventative Maintenance  
Performed -- Timer Reset

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
05/01/2015 11:11:41

-----  
Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546  
-----

QAS: A. AUTRET #53546  
TUCSON PD  
-----

Operator: A. AUTRET #53546  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	11:12:10
0.100 Cal Check	0.101	11:12:31
Air Blank	0.000	11:13:01

Preventative Maintenance  
Performed -- Timer Reset

*External printer  
was offline and  
internal printed.  
Repeated cal check  
to print on external  
printer. AS*