



CERTIFICATION by CUSTODIAN of RECORDS
Tucson Police Department Crime Laboratory

754
3-17-08

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-002759 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 3-7-08 Cal 1 0.102 AC Cal 2 0.102 AC

Between the dates of 2-8-08 and 3-7-08 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.
The instrument was returned to service on N/A.


Clare Conley

Clare L. Conley

3-14-08

ADPS QAS Permit # 33314

SUBSCRIBED AND SWORN to before me this 14, day of March, 2008.

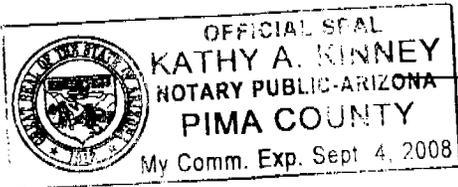

Kathy A Kinney

Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

147
OK
134
3-17-08

QA SPECIALIST Clare Conley AGENCY Tucson Police Department

DATE 3-7-08 TIME 0828

INTOXILYZER SERIAL # 80-002759 LOCATION ODM

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 102 AC

Instrument is operating properly and accurately. YES NO

COMMENTS None.

SIGNATURE Clare Conley

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Clare Conley AGENCY Tucson Police Department
 DATE 3-7-08 TIME 0828
 Intoxilyzer Serial # SD-002759 Location ODM

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
 OR
 Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 102 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Clare Conley

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000
Location: ARIZONA
Serial Number: 80-002759
03/07/2008 08:28:15

347
cu
TSH

Standard Lot#: 725401I
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	08:28:43
Cal Check	0.102	08:29:01
Air Blank	0.000	08:29:31

Clare Conley

Operator's Signature

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-002759
03/07/2008 08:29:39

467
cu
754

Standard Lot#: 7254011
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST,SQAP
DOB: 11/11/1111
Sex: M Weight: 111
15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:30:28
Diagnostic Test	Pass	08:30:56
Air Blank	0.000	08:31:23
0.100 Cal Check	0.102	08:31:42
Air Blank	0.000	08:32:11
Subject Test	0.000	08:32:28
Air Blank	ABT*	08:32:34
Air Blank	0.000	08:33:03

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-002759
03/07/2008

08:33:07

567
cu
PM

Standard Lot#: 725401I
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST,SQAP
DOB: 11/11/1111
Sex: M Weight: 111
15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	08:33:41
Air Blank	IPS**	08:33:51

*RFI Detect
**Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-002759
03/07/2008

08:34:04

b87
cu
134

Standard Lot#: 7254011
Last Changed By: C. CONLEY #34517
QAS: C. CONLEY #34517
TUCSON PD
Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SOAP
DOB: 11/11/1111
Sex: M Weight: 111
15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:34:57
Diagnostic Test	Pass	08:35:24
Air Blank	0.000	08:35:52
0.100 Cal Check	0.102	08:36:10
Air Blank	0.000	08:36:40
Subject Test	0.061*	08:39:48
Air Blank	0.000	08:40:20
Air Blank	0.000	08:40:48
Subject Test	XXX**	08:41:05
Air Blank	0.000	08:41:39

*Deficient Sample
**Invalid Sample
Begin new deprivation period

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: ARIZONA
Serial Number: 80-002759
03/07/2008 08:42:05

Standard Lot#: 7254011
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	08:42:32
Cal Check	0.102	08:42:51
Air Blank	0.000	08:43:20

787
C
154

Clare Conley
Operator's Signature