



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
270 S. Stone Avenue Tucson, AZ 85701-1917

Ch
3-16-11

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-000323 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 03/09/2011 Cal 1 0.096 AC Cal 2 0.095 AC

Between the dates of 02/10/2011 and 03/09/2011 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.
The instrument was returned to service on N/A.

Cheryl K. Straub

Cheryl K. Straub


03/16/2011

ADPS QAS Permit # 33408

SUBSCRIBED AND SWORN to before me this 16, day of March, 2011.

A.M. Hernández

Notary Public

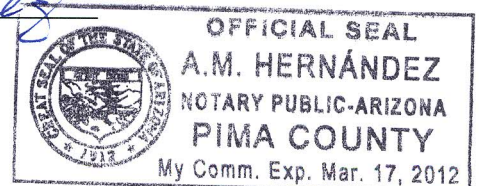

*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

197
CS

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

CH
3-16-11

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Cheryl STRAUB AGENCY Tucson Police Department
DATE 03/09/2011 TIME 14:15
INTOXILYZER SERIAL # 80-000323 LOCATION CRIME LAB

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

(✓) 1. Clock time check.
(✓) 2. Date check.

OPERATIONAL TESTS

(✓) 1. Alcohol-free subject test result 0. 000 AC.
(✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 095 AC

Instrument is operating properly and accurately. YES ✓ NO

COMMENTS

SIGNATURE

Cheryl Straub

277
cs

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000323
03/09/2011

14:20:46

Standard Lot#: 642845
Last Changed By: C. STRAUB #50772

QAS: C. STRAUB #50772
TUCSON PD

Operator: C. STRAUB #50772
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	14:21:48
Diagnostic Test	Pass	14:22:15
Air Blank	0.000	14:22:43
0.100 Cal Check	0.096	14:23:01
Air Blank	0.000	14:23:31
Subject Test	0.000	14:23:47
Air Blank	ABT*	14:23:54
Air Blank	0.000	14:24:22

*Sequence Aborted

Not a Successfully Completed Test Sequence

377
CR

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000323

03/09/2011

14:24:44

Standard Lot#: 642845

Last Changed By: C. STRAUB

#50772

QAS: C. STRAUB

#50772

TUCSON PD

Operator: C. STRAUB

#50772

TUCSON PD

Subject: SQAP,SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	14:25:51
Air Blank	IPS**	14:26:01

*RFI Detect

**Improper Sample

Ch

Not a Successfully Completed Test Sequence

477
CS

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000323

03/09/2011

14:26:10

Standard Lot#: 642845

Last Changed By: C. STRAUB

#50772

QAS: C. STRAUB

#50772

TUCSON PD

Operator: C. STRAUB

#50772

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	14:27:30
Diagnostic Test	Pass	14:27:58
Air Blank	0.000	14:28:25
0.100 Cal Check	0.096	14:28:44
Air Blank	0.000	14:29:13
Subject Test	0.313*	14:32:22
Air Blank	0.000	14:32:55
Air Blank	0.000	14:33:23
Subject Test	XXX**	14:33:58
Air Blank	0.000	14:34:32

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

577
CS

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000323

03/09/2011

14:35:03

Standard Lot#: 642845

Last Changed By: C. STRAUB #50772


QAS: C. STRAUB #50772

TUCSON PD

Test g/210L Time

Air Blank 0.000 14:35:30
Cal Check 0.095 14:35:49
Air Blank 0.000 14:36:18

CS

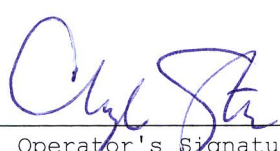

Operator's Signature

EXHIBIT G-2

697
CS

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

CM
3-16-11

QA Specialist Cheryl STRAUB AGENCY Tucson Police Department
DATE 03/09/2011 TIME 14:15
Intoxilyzer Serial # 80-000323 Location CRIME LAB

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution N/A AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 094 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

Cheryl Straub

DPS Form Exh G-2 (Rev. 05-01)

787
CS

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000323

03/09/2011

14:15:52

Standard Lot#: 642845


Last Changed By: C. STRAUB #50772

QAS: C. STRAUB #50772

TUCSON PD

CM

Test	g/210L	Time
Air Blank	0.000	14:16:19
Cal Check	0.096	14:16:38
Air Blank	0.000	14:17:07



Operator's Signature