



CERTIFICATION by CUSTODIAN of RECORDS
Tucson Police Department Crime Laboratory

134
6-11-07

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-000331 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 6-7-07 Cal 1 0.101 AC Cal 2 0.101 AC

Between the dates of 5-10-07 and 6-7-07
the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.
The instrument was returned to service on N/A.


Clare Conley

Clare L. Conley

6-8-2007

ADPS QAS Permit # 33314

SUBSCRIBED AND SWORN to before me this 8, day of
June, 2007.

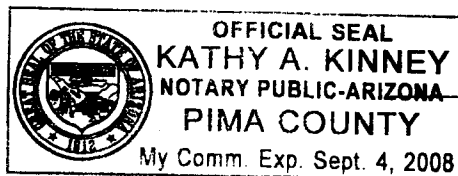

Kathy A Kinney

Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Clare Conley 34517 AGENCY Tucson Police Department
DATE 6-7-07 TIME 0831
INTOXILYZER SERIAL # 80-000331 LOCATION ODW

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
(✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
(✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 101 AC

Instrument is operating properly and accurately. YES ✓ NO

COMMENTS

SIGNATURE

Clare Conley

DPS Form Exh G-4 (Rev. 05-01)

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

2 of 8 Cu

B4
6.11.07

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000331

06/07/2007

08:35:01

Standard Lot#: 629301I

Last Changed By: J. COOMBS

#46160

QAS: C. CONLEY

#34517

TUCSON PD

Operator: C. CONLEY

#34517

TUCSON PD

Subject: TEST, SQAP

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

| Test | g/210L | Time |
|------------------|--------|----------|
| Air Blank | 0.000 | 08:36:25 |
| Diagnostic Test | Pass | 08:36:52 |
| Air Blank | 0.000 | 08:37:20 |
| 0.100 Cal Check | 0.102 | 08:37:39 |
| Air Blank | 0.000 | 08:38:08 |
| Subject Test | 0.000 | 08:38:27 |
| Air Blank | 0.000 | 08:38:55 |
| Five Minute Wait | ABT* | |
| Air Blank | 0.000 | 08:39:36 |

*Sequence Aborted

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000331

06/07/2007

08:40:01

Standard Lot#: 629301I

Last Changed By: J. COOMBS

#46160

QAS: C. CONLEY

#34517

TUCSON PD

Operator: C. CONLEY

#34517

TUCSON PD

Subject: TEST, SQAP

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

| Test | g/210L | Time |
|-----------------|--------|----------|
| Air Blank | 0.000 | 08:41:20 |
| Diagnostic Test | Pass | 08:41:48 |
| Air Blank | 0.000 | 08:42:15 |
| 0.100 Cal Check | 0.101 | 08:42:34 |
| Air Blank | IPS* | 08:42:46 |
| Air Blank | 0.000 | 08:43:14 |

*Improper Sample

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

3 of 8 Cn

TS4
6-11-07

4 of 8 Cn

Ty
6-11-07

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000331
06/07/2007

08:43:25

Standard Lot#: 629301I
Last Changed By: J. COOMBS #46160

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

| Test | g/210L | Time |
|-----------------|--------|----------|
| Air Blank | 0.000 | 08:44:25 |
| Diagnostic Test | Pass | 08:44:52 |
| Air Blank | 0.000 | 08:45:19 |
| 0.100 Cal Check | RFI* | 08:45:33 |
| Air Blank | 0.000 | 08:46:04 |

*RFI Detect

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000331
06/07/2007

08:46:36

TS4
6-11-07

Standard Lot#: 629301I
Last Changed By: J. COOMBS #46160

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

| Test | g/210L | Time |
|------------------|--------|----------|
| Air Blank | 0.000 | 08:47:59 |
| Diagnostic Test | Pass | 08:48:26 |
| Air Blank | 0.000 | 08:48:53 |
| 0.100 Cal Check | 0.101 | 08:49:12 |
| Air Blank | 0.000 | 08:49:42 |
| Subject Test | 0.053* | 08:52:50 |
| Air Blank | 0.000 | 08:53:22 |
| Air Blank | 0.000 | 08:53:49 |
| Subject Test | 0.085 | 08:54:06 |
| Air Blank | 0.000 | 08:54:38 |
| Five Minute Wait | | |
| Air Blank | 0.000 | 08:59:34 |
| Subject Test | XXX** | 08:59:52 |
| Air Blank | 0.000 | 09:00:20 |

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000331

06/07/2007

09:01:36

Standard Lot#: 629301I

Last Changed By: J. COOMBS #46160

QAS: C. CONLEY #34517

TUCSON PD

| Test | g/210L | Time |
|-----------|--------|----------|
| Air Blank | 0.000 | 09:02:04 |
| Cal Check | 0.101 | 09:02:22 |
| Air Blank | 0.000 | 09:02:52 |

Clare Conley

Operator's Signature

6 of 8 cu

By
6-11-07

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Clare Conley 34517 AGENCY Tucson Police Department
DATE 6-7-07 TIME 0831
Intoxilyzer Serial # 80-000331 Location ODW

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 101 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

Clare Conley

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000331
06/07/2007 08:31:36


848Cu

TS4
6-11-07

Standard Lot#: 629301I
Last Changed By: J. COOMBS #46160

QAS: C. CONLEY #34517
TUCSON PD

| Test | g/210L | Time |
|-----------|--------|----------|
| Air Blank | 0.000 | 08:32:03 |
| Cal Check | 0.101 | 08:32:22 |
| Air Blank | 0.000 | 08:32:51 |



Operator's Signature