



CERTIFICATION by CUSTODIAN of RECORDS
Tucson Police Department Crime Laboratory

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-000331 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

BH
10-6-2008

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 9/26/08 Cal 1 0.100 AC Cal 2 0.101 AC

Between the dates of 8/29/08 and 9/26/08 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on —
The instrument was returned to service on —

Sarah Cione

Sarah L. Cione


10/3/08

ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 3rd, day of October, 20 08.

A.M. Hernandez

Notary Public

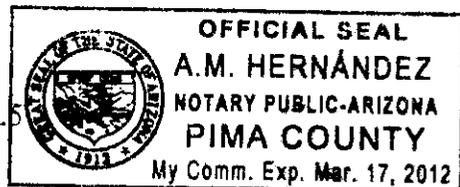

*Includes documents specified in A.A.C. R13-10-104.A.5

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

1 of 8 sc

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

TBY
10-6-08

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department

DATE 9/26/08 TIME 14:54

INTOXILYZER SERIAL # 80-000331 LOCATION DUI HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 101 AC

Instrument is operating properly and accurately. YES NO

COMMENTS

SIGNATURE Sarah Cione

2 of 8 SC

BM

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000331
09/26/2008 14:56:03

Standard Lot#: 8112011
Last Changed By: C. CONLEY #34517

DAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SOAP, TEST
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	14:56:53
Diagnostic Test	Fail*	14:57:23
Air Blank	0.000	14:57:52

* Temperature Regulation Test

Not a Successfully
Completed
Test Sequence

3 of 8 sc

BM

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000331
09/26/2008 14:58:08

Standard Lot#: 8112011
Last Changed By: C. CONLEY #34517

OAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SOAP, TEST
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	14:58:56
Diagnostic Test	Pass	14:59:24
Air Blank	0.000	14:59:52
0.100 Cal Check	0.100	15:00:11
Air Blank	0.000	15:00:40
Subject Test	0.000	15:00:55
Air Blank	0.000	15:01:22
Five Minute Wait	ABT*	
Air Blank	0.000	15:01:58

*Sequence Aborted

Not a Successfully
Completed
Test Sequence

4 of 8 sc

B4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000331
09/26/2008 15:02:09

Standard Lot#: 811201
Last Changed By: C. CONLEY #34517

OAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SOAP, TEST
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	15:02:36
Air Blank	IPS**	15:02:45

*RFI Detect
**Improper Sample

Not a Successfully
Completed
Test Sequence

5 of 8 sc

B4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000331
09/26/2008 15:02:56

Standard Lot#: 8112011
Last Changed By: C. CONLEY #34517

DAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SOAP, TEST
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:03:47
Diagnostic Test	Pass	15:04:16
Air Blank	0.000	15:04:43
0.100 Cal Check	0.100	15:05:02
Air Blank	0.000	15:05:32
Subject Test	0.099*	15:08:40
Air Blank	0.000	15:09:12
Air Blank	0.000	15:09:40
Subject Test	XXX**	15:10:09
Air Blank	0.000	15:10:42

*Deficient Sample
**Invalid Sample
Begin new deprivation period

Not a Successfully
Completed
Test Sequence

6 of 85c
B4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000331
09/26/2008 15:11:16

Standard Lot#: 8112011
Last Changed By: C. CONLEY #34517

GAS: S. CIGNE #50616
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	15:11:43
Cal Check	0.101	15:12:02
Air Blank	0.000	15:12:32

Sarah Cigno
Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

7 of 8 SC
TS4
10-6-08

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Sarah Cione AGENCY Tucson Police Department
DATE 9/26/08 TIME 14:54
Intoxilyzer Serial # 80-000331 Location DUI HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 100 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

80785c
754

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000331
09/26/2008 14:54:38

Standard Lot#: 8112011
Last Changed By: C. CONLEY #34517

OAS: S. CIONE #50616
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	14:55:05
Cal Check	0.100	14:55:24
Air Blank	0.000	14:55:53

Sarah Cione
Operator's Signature
