



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
270 S. Stone Avenue Tucson, AZ 85701-1917

By
10-18-2010

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-000331 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 10-14-10 Cal 1 0.097 AC Cal 20.096 AC

Between the dates of 9-16-10 and 10-14-10 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.
The instrument was returned to service on N/A.

Clare Conley

Clare L. Conley


10-15-10

ADPS QAS Permit # 33314

SUBSCRIBED AND SWORN to before me this 15, day of October, 2010.

Laura B Hodgson

Notary Public

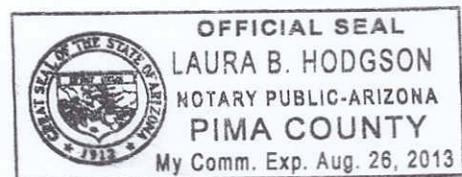

*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

157
CW
TSY
10-18-2010

QA SPECIALIST Clare Conley AGENCY Tucson Police Department

DATE 10-14-10 TIME 0830

INTOXILYZER SERIAL # 80-000331 LOCATION ODW DW HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 096 AC

Instrument is operating properly and accurately. YES NO

COMMENTS None.

SIGNATURE Clare Conley

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000331
10/14/2010

08:32:47

2587
CU

Standard Lot#: 654682
Last Changed By: C. CONLEY #34517

D4

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST,SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:33:34
Diagnostic Test	Pass	08:34:01
Air Blank	0.000	08:34:29
0.100 Cal Check	0.097	08:34:48
Air Blank	0.000	08:35:17
Subject Test	0.000	08:36:05
Air Blank	ABT*	08:36:19
Air Blank	0.000	08:36:48

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000331
10/14/2010

08:37:02

3587
lu

Standard Lot#: 654682
Last Changed By: C. CONLEY #34517

TS4

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	08:37:51
Air Blank	IPS**	08:38:01

*RFI Detect
**Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000331
10/14/2010

08:39:38

Standard Lot#: 654682
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST,SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:40:33
Diagnostic Test	Pass	08:41:00
Air Blank	0.000	08:41:27
0.100 Cal Check	0.097	08:41:46
Air Blank	0.000	08:42:16
Subject Test	0.138*	08:45:24
Air Blank	0.000	08:45:56
Air Blank	0.000	08:46:23
Subject Test	XXX**	08:46:50
Air Blank	0.000	08:47:24

*Deficient Sample

**Invalid Sample

Begin new deprivation period

4567
CW
124

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000331

10/14/2010

08:47:50

5087
CU
BY

Standard Lot#: 654682

Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517

TUCSON PD

Test g/210L Time

Air Blank 0.000 08:48:18
Cal Check 0.096 08:48:36
Air Blank 0.000 08:49:06

Clare Conley

Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

b 587
em

T54
10-18-2010

QA Specialist Clare Conley AGENCY Tucson Police Department
DATE 10-14-10 TIME 0830
Intoxilyzer Serial # 50-000331 Location ODW DM HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 097 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Clare Conley

DPS Form Exh G-2 (Rev. 05-01)

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000331

10/14/2010

08:30:53

7567
CW

Standard Lot#: 654682

Last Changed By: C. CONLEY #34517

TS4

QAS: C. CONLEY #34517

TUCSON PD

Test g/210L Time

Air Blank 0.000 08:31:20
Cal Check 0.097 08:31:39
Air Blank 0.000 08:32:09

Clare Conley

Operator's Signature