



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory  
270 S. Stone Avenue Tucson, AZ 85701-1917

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-000332 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

By  
6-27-2011

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 6/23/11 Cal 1 0.096 AC Cal 2 0.096 AC

Between the dates of 5/26/11 and 6/23/11  
the instrument was operating properly and accurately.

The instrument was taken out of service for repair on -  
The instrument was returned to service on -

Sarah L. Cione

Sarah L. Cione

6/27/11


ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 27, day of June, 20 11.

A.M. Hernandez

Notary Public

\*Includes documents specified in A.A.C. R13-10-104.A.5

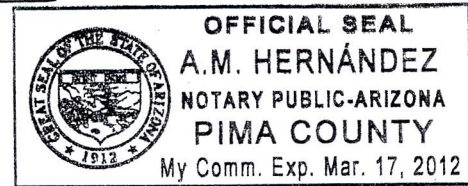

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

1 of 7 SC

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

TS4  
6.27.2011

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department

DATE 6/23/11 TIME 951

INTOXILYZER SERIAL # 80-000332 LOCATION DUI HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.  
(✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.  
(✓) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed  
(✓) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.  
(✓) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 096 AC

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE Sarah Cione

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000332

06/23/2011

09:53:38

Standard Lot#: 719919

Last Changed By: W. HONOMICHL

#42992

QAS: S. CIONE

#50616

TUCSON PD

Operator: S. CIONE

#50616

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

| Test             | g/210L | Time     |
|------------------|--------|----------|
| Air Blank        | 0.000  | 09:54:23 |
| Diagnostic Test  | Pass   | 09:54:50 |
| Air Blank        | 0.000  | 09:55:18 |
| 0.100 Cal Check  | 0.096  | 09:55:36 |
| Air Blank        | 0.000  | 09:56:06 |
| Subject Test     | 0.000  | 09:57:02 |
| Air Blank        | 0.000  | 09:57:29 |
| Five Minute Wait | ABT*   |          |
| Air Blank        | 0.000  | 09:58:23 |

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000332

06/23/2011

10:01:01

3 of 7<sub>sc</sub>

15h

---

Standard Lot#: 719919

Last Changed By: W. HONOMICHL

#42992

---

QAS: S. CIONE

#50616

TUCSON PD

---

Operator: S. CIONE

#50616

TUCSON PD

---

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

---

15 Minute Deprivation Period? Yes

---

| Test      | g/210L | Time     |
|-----------|--------|----------|
| Air Blank | RFI*   | 10:01:28 |
| Air Blank | IPS**  | 10:01:35 |

\*RFI Detect

\*\*Improper Sample

**Not a Successfully Completed Test Sequence**



INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000332

06/23/2011

10:04:58

4 of 7<sub>sc</sub>

124

Standard Lot#: 719919

Last Changed By: W. HONOMICHL #42992

QAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F Weight: 111

15 Minute Deprivation Period? Yes

| Test            | g/210L | Time     |
|-----------------|--------|----------|
| Air Blank       | 0.000  | 10:05:45 |
| Diagnostic Test | Pass   | 10:06:12 |
| Air Blank       | 0.000  | 10:06:40 |
| 0.100 Cal Check | 0.096  | 10:06:59 |
| Air Blank       | 0.000  | 10:07:28 |
| Subject Test    | 0.049* | 10:10:37 |
| Air Blank       | 0.000  | 10:11:08 |
| Air Blank       | 0.000  | 10:11:36 |
| Subject Test    | XXX**  | 10:11:53 |
| Air Blank       | 0.000  | 10:12:26 |

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000332

06/23/2011

10:12:58

-----  
Standard Lot#: 719919

Last Changed By: W. HONOMICHL #42992  
-----

QAS: S. CIONE #50616

TUCSON PD  
-----

| Test      | g/210L | Time     |
|-----------|--------|----------|
| Air Blank | 0.000  | 10:13:25 |
| Cal Check | 0.096  | 10:13:44 |
| Air Blank | 0.000  | 10:14:13 |

*Sarah Cione*

\_\_\_\_\_  
Operator's Signature

5 of 7<sub>sc</sub>

134

EXHIBIT G-2

6 of 7<sub>sc</sub>

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

T54  
6.27.2011

QA Specialist Sarah Cione AGENCY Tucson Police Department  
DATE 6/23/11 TIME 951  
Intoxilyzer Serial # 80-000332 Location DUI HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 096 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

DPS Form Exh G-2 (Rev. 05-01)

7 of 7 sc

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-000332  
06/23/2011 09:51:48

154

-----  
Standard Lot#: 719919  
Last Changed By: W. HONOMICHL #42992  
-----

QAS: S. CIONE #50616  
TUCSON PD  
-----

| Test      | g/210L | Time     |
|-----------|--------|----------|
| Air Blank | 0.000  | 09:52:16 |
| Cal Check | 0.096  | 09:52:34 |
| Air Blank | 0.000  | 09:53:04 |

Sarah Cione  
Operator's Signature