



# CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory  
1306 W. Miracle Mile, Tucson, AZ 85705

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-000334 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

TS4  
11-7-2011

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 10/17/11 Cal 1 0.098 AC Cal 2 0.098 AC

Between the dates of 9/15/11 and 10/17/11 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on -.  
The instrument was returned to service on -.

Sarah Cione

Sarah L. Cione


10/27/11

ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 27, day of October, 20 11.

A.M. Hernandez

Notary Public

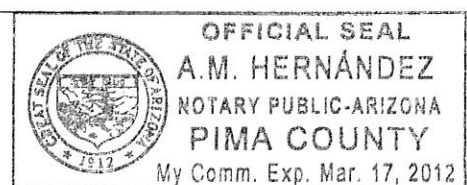

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

1 of 9<sub>sc</sub>

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

TS4  
11.7-2011

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department

DATE 10/17/11 TIME 1046

INTOXILYZER SERIAL # 80-000334 LOCATION DUI HQ

( ✓ ) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- ( ✓ ) 1. Clock time check.  
( ✓ ) 2. Date check.

OPERATIONAL TESTS

- ( ✓ ) 1. Alcohol-free subject test result 0. 000 AC.  
( ✓ ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed  
( ✓ ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.  
( ✓ ) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 098 AC

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS 1 day past due on Calibration Check  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE Sarah Cione

INTOXILYZER 8000  
 Location: TUCSON POLICE DEPT  
 Serial Number : 80-000334  
 10/17/2011

10:47:31

TS4

Standard Lot#: 20910100A1  
 Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616  
 TUCSON PD

Operator: S. CIONE #50616  
 TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

| Test             | g/210L | Time     |
|------------------|--------|----------|
| Air Blank        | 0.000  | 10:48:17 |
| Diagnostic Test  | Pass   | 10:48:44 |
| Air Blank        | 0.000  | 10:49:11 |
| 0.100 Cal Check  | 0.098  | 10:49:30 |
| Air Blank        | 0.000  | 10:50:00 |
| Subject Test     | 0.000  | 10:50:26 |
| Air Blank        | 0.000  | 10:50:54 |
| Five Minute Wait | ABT*   |          |
| Air Blank        | 0.000  | 10:51:29 |

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

3 of 9<sub>sc</sub>

104

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000334

10/17/2011

10:51:54

---

Standard Lot#: 20910100A1

Last Changed By: S. CIONE

#50616

---

QAS: S. CIONE

#50616

TUCSON PD

---

Operator: S. CIONE

#50616

TUCSON PD

---

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

---

15 Minute Deprivation Period? Yes

---

| Test      | g/210L | Time     |
|-----------|--------|----------|
| Air Blank | RFI*   | 10:52:19 |
| Air Blank | IPS**  | 10:52:27 |

\*RFI Detect

\*\*Improper Sample

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-000334

10/17/2011

10:53:41

B4

Standard Lot#: 20910100A1

Last Changed By: S. CIONE

#50616

QAS: S. CIONE

#50616

TUCSON PD

Operator: S. CIONE

#50616

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

| Test            | g/210L | Time     |
|-----------------|--------|----------|
| Air Blank       | 0.000  | 10:54:23 |
| Diagnostic Test | Pass   | 10:54:51 |
| Air Blank       | 0.000  | 10:55:18 |
| 0.100 Cal Check | 0.099  | 10:55:37 |
| Air Blank       | 0.000  | 10:56:07 |
| Subject Test    | 0.064* | 10:59:15 |
| Air Blank       | 0.000  | 10:59:47 |
| Air Blank       | 0.000  | 11:00:14 |
| Subject Test    | XXX**  | 11:00:52 |
| Air Blank       | 0.000  | 11:01:26 |

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000334

10/17/2011

11:02:28

B4

-----  
Standard Lot#: 20910100A1Last Changed By: S. CIONE #50616  
-----

QAS: S. CIONE #50616

TUCSON PD  
-----

| Test      | g/210L | Time     |
|-----------|--------|----------|
| Air Blank | 0.000  | 11:02:55 |
| Cal Check | 0.098  | 11:03:14 |
| Air Blank | 0.000  | 11:03:43 |



Operator's Signature

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

## ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000TS4  
11.7.2011

## STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Sarah Cione AGENCY Tucson Police Department  
DATE 10/17/11 TIME 1046  
Intoxilyzer Serial # 80-000334 Location DUI HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 098 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

Sarah Cione

DPS Form Exh G-2 (Rev. 05-01)

7 of 9sc

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000334

10/17/2011

10:46:04

TS4

-----  
Standard Lot#: 20910100A1

Last Changed By: S. CIONE #50616  
-----

QAS: S. CIONE #50616

TUCSON PD  
-----

---

| Test      | g/210L | Time     |
|-----------|--------|----------|
| Air Blank | 0.000  | 10:46:31 |
| Cal Check | 0.098  | 10:46:50 |
| Air Blank | 0.000  | 10:47:19 |

*Sarah Cione*

\_\_\_\_\_  
Operator's Signature



TUCSON POLICE DEPARTMENT  
CRIME LABORATORY

8 of 9 sc

INTOXILYZER SERVICE RECORD

Date: 10/17/11  
QAS: Sarah Cione  
Intoxilyzer Serial Number: 80-000334

TS4  
11.7.2011

Reason For Service: During SQAP check, breath hose felt + sounded like there was a leak. More difficult to do a breath test as breath sample seemed to be leaking out of breath hose. Still able to complete SQAP

Date Out of Service: 10/17/11

Calibration Check completed prior to removal from service

Date: Did not remove from service

SQAP completed prior to removal from service

Date: Did not remove from service

Corrective Action: ☐ Sent to CMI, Inc.

Replaced breath hose. Completed a breath test successfully.

9 of 95c

TS4

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-000334  
10/17/2011 13:59:09

Standard Lot#: 20910100A1  
Last Changed By: S. CIONE #50616

OAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: TEST,TEST  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

| Test             | g/210L | Time     |
|------------------|--------|----------|
| Air Blank        | 0.000  | 13:59:59 |
| Diagnostic Test  | Pass   | 14:00:28 |
| Air Blank        | 0.000  | 14:00:55 |
| 0.100 Cal Check  | 0.098  | 14:01:14 |
| Air Blank        | 0.000  | 14:01:43 |
| Subject Test     | 0.000  | 14:02:13 |
| Air Blank        | 0.000  | 14:02:41 |
| Five Minute Wait |        |          |
| Air Blank        | 0.000  | 14:07:41 |
| Subject Test     | 0.000  | 14:07:57 |
| Air Blank        | 0.000  | 14:08:24 |
| 0.100 Cal Check  | 0.098  | 14:08:43 |
| Air Blank        | 0.000  | 14:09:13 |
| Diagnostic Test  | Pass   | 14:09:42 |

Successfully  
Completed  
Test Sequence