



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
1306 W. Miracle Mile, Tucson, AZ 85705

TBY
12-18-2015

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-001108 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 12-10-15 Cal 1 0.100 AC Cal 2 0.099 AC

Between the dates of 11-12-15 and 12-10-15 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on _____.
The instrument was returned to service on _____.


Amy L. Autret

12-16-15

ADPS QAS Permit # 33718

SUBSCRIBED AND SWORN to before me this 16, day of December, 2015.

Notary Public

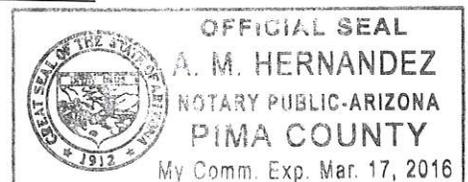

*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

10F7
JL
TS4
12-18-2015

QA SPECIALIST Amy Autret 53546 AGENCY Tucson Police Department

DATE 12-10-15 TIME 0756

INTOXILYZER SERIAL # 80-001108 LOCATION Laboratory

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

(✓) 1. Clock time check.

(✓) 2. Date check.

OPERATIONAL TESTS

(✓) 1. Alcohol-free subject test result 0. 000 AC.

(✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed


(✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.

(✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 099 AC

Instrument is operating properly and accurately. YES NO

COMMENTS

SIGNATURE

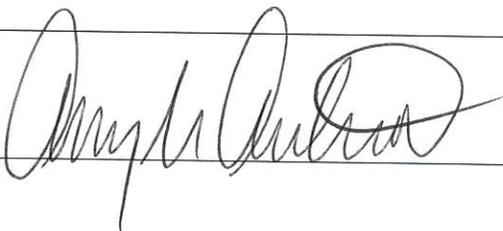

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-001108
Core Version: 8105.48
12/10/2015

07:59:27

2 of 7
MS
T54

Standard Lot#: 12415100A4
Last Changed By: W. LOOMIS #53545

QAS: A. AUTRET #53546
TUCSON PD

Operator: A. AUTRET #53546
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:00:24
Diagnostic Test	Pass	08:00:59
Air Blank	0.000	08:01:26
0.100 Cal Check	0.099	08:01:47
Air Blank	0.000	08:02:17
Subject Test	0.000	08:02:40
Air Blank	0.000	08:03:07
Wait	ABT*	
Air Blank	0.000	08:03:42

*Sequence Aborted

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-001108
Core Version: 8105.48
12/10/2015

08:03:51

3 of 7
JLS
TS4

Standard Lot#: 12415100A4
Last Changed By: W. LOOMIS #53545

QAS: A. AUTRET #53546
TUCSON PD

Operator: A. AUTRET #53546
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:04:43
Diagnostic Test	Pass	08:05:18
Air Blank	0.000	08:05:45
0.100 Cal Check	RFI*	08:05:59
Air Blank	IPS**	08:06:07

*RFI Detect

**Improper Sample

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-001108
Core Version: 8105.48
12/10/2015

08:06:16

4 of 7
JLD
754

Standard Lot#: 12415100A4
Last Changed By: W. LOOMIS #53545

QAS: A. AUTRET #53546
TUCSON PD

Operator: A. AUTRET #53546
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:07:21
Diagnostic Test	Pass	08:07:56
Air Blank	0.000	08:08:24
0.100 Cal Check	0.100	08:08:44
Air Blank	0.000	08:09:14
Subject Test	0.124*	08:12:22
Air Blank	0.000	08:12:53
Air Blank	0.000	08:13:21
Subject Test	XXX**	08:13:42
Air Blank	0.000	08:14:16

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-001108
Core Version: 8105.48
12/10/2015 08:14:57

5 of 7
edd
TSh

Standard Lot#: 12415100A4
Last Changed By: W. LOOMIS #53545

QAS: A. AUTRET #53546
TUCSON PD

Operator: A. AUTRET #53546
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	08:15:26
0.100 Cal Check	0.099	08:15:47
Air Blank	0.000	08:16:17

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

6 of 7
TS4
12.18.2015

QA Specialist Amy Autret 53546 AGENCY Tucson Police Department

DATE 12-10-15 TIME 0756

Intoxilyzer Serial # 80-001108 Location Laboratory

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 100 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

DPS Form Exh G-2 (Rev. 05-01)

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-001108
Core Version: 8105.48
12/10/2015 07:56:07

7047
Ad
TS4

Standard Lot#: 12415100A4
Last Changed By: W. LOOMIS #53545

QAS: A. AUTRET #53546
TUCSON PD

Operator: A. AUTRET #53546
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	07:56:38
0.100 Cal Check	0.100	07:56:58
Air Blank	0.000	07:57:28

Preventative Maintenance
Performed -- Timer Reset