



CERTIFICATION by CUSTODIAN of RECORDS  
 Tucson Police Department Crime Laboratory  
 1306 W. Miracle Mile, Tucson, AZ 85705

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-001163 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

SC  
11/21/12

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 11.15.2012 Cal 1 0.098 AC Cal 2 0.098 AC

Between the dates of 10.18.2012 and 11.15.2012 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on                     .  
 The instrument was returned to service on                     .

Terry S. Gallegos

Terry S. Gallegos


11.20.2012

ADPS QAS Permit # 33169

SUBSCRIBED AND SWORN to before me this 20<sup>th</sup>, day of November, 2012.

Elma Escarcega

Notary Public

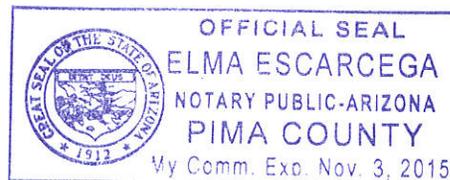

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

1078  
TDy

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

SC  
11/21/12

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Terry Gallegos 28847 AGENCY Tucson Police Department

DATE 11.15.2012 TIME 1002

INTOXILYZER SERIAL # 80-001163 LOCATION ODM

( ✓ ) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- ( ✓ ) 1. Clock time check.
- ( ✓ ) 2. Date check.

OPERATIONAL TESTS

- ( ✓ ) 1. Alcohol-free subject test result 0. 000 AC.
- ( ✓ ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- ( ✓ ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- ( ✓ ) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 098 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE Terry Gallegos

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number : 80-001163  
11/15/2012

10:03:23

2018  
TJ

Standard Lot#: 23511100A2  
Last Changed By: T. GALLEGOS #28847

SC

QAS: T. GALLEGOS #28847  
TUCSON PD

Operator: T. GALLEGOS #28847  
TUCSON PD

Subject: TEST, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:04:16
Diagnostic Test	Pass	10:04:44
Air Blank	0.000	10:05:11
0.100 Cal Check	0.098	10:05:30
Air Blank	0.000	10:06:00
Subject Test	0.000	10:06:42
Air Blank	0.000	10:07:09
Five Minute Wait	ABT*	
Air Blank	0.000	10:07:50

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number : 80-001163  
11/15/2012 10:08:10

3058  
TS4

Standard Lot#: 23511100A2  
Last Changed By: T. GALLEGOS #28847

SC

QAS: T. GALLEGOS #28847  
TUCSON PD

Operator: T. GALLEGOS #28847  
TUCSON PD

Subject: TEST,SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:09:06
Diagnostic Test	Pass	10:09:33
Air Blank	0.000	10:10:01
0.100 Cal Check	RFI*	10:10:17
Air Blank	IPS**	10:10:26

\*RFI Detect

\*\*Improper Sample

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number : 80-001163  
11/15/2012 10:10:31

40f8  
TS4

SC

Standard Lot#: 23511100A2  
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847  
TUCSON PD

Operator: T. GALLEGOS #28847  
TUCSON PD

Subject: TEST, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:11:18
Diagnostic Test	Pass	10:11:45
Air Blank	0.000	10:12:13
0.100 Cal Check	0.097	10:12:31
Air Blank	0.000	10:13:01
Subject Test	RFI*	10:13:46
Air Blank	0.000	10:14:20

\*RFI Detect

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number : 80-001163  
11/15/2012 10:14:27

50f8  
TS4

Standard Lot#: 23511100A2  
Last Changed By: T. GALLEGOS #28847

SC

QAS: T. GALLEGOS #28847  
TUCSON PD

Operator: T. GALLEGOS #28847  
TUCSON PD

Subject: TEST, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:15:18
Diagnostic Test	Pass	10:15:45
Air Blank	0.000	10:16:13
0.100 Cal Check	0.097	10:16:31
Air Blank	0.000	10:17:01
Subject Test	0.115*	10:20:09
Air Blank	0.000	10:20:41
Air Blank	0.000	10:21:09
Subject Test	XXX**	10:21:30
Air Blank	0.000	10:22:05

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number: 80-001163  
11/15/2012 10:22:28

60f8  
D4

-----  
Standard Lot#: 23511100A2  
Last Changed By: T. GALLEGOS #28847  
-----

5C

-----  
QAS: T. GALLEGOS #28847  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	10:22:55
Cal Check	0.098	10:23:14
Air Blank	0.000	10:23:44

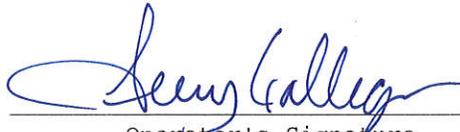
  
-----  
Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

*Fofg*  
*TS4*

*SC*  
*11/21/12*

QA Specialist Terry Gallegos 28847 AGENCY Tucson Police Department  
DATE 11-15-2012 TIME 1002  
Intoxilyzer Serial # 80-001163 Location ODM

- ( ✓ ) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- ( ✓ ) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ( ✓ ) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ( ✓ ) 4. Air blank completed.
- ( ✓ ) 5. Calibration check completed. Test results 0. 098 AC.
- ( ✓ ) 6. Air blank completed.
- ( ✓ ) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE *Terry Gallegos*

DPS Form Exh G-2 (Rev. 05-01)

*Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.*

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number: 80-001163  
11/15/2012 10:02:01


8048  
TSH

-----  
Standard Lot#: 23511100A2  
Last Changed By: T. GALLEGOS #28847  
-----

SC

-----  
QAS: T. GALLEGOS #28847  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	10:02:28
Cal Check	0.098	10:02:47
Air Blank	0.000	10:03:17

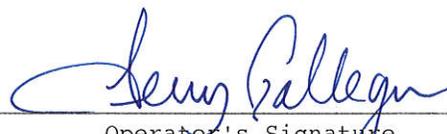  
-----  
Operator's Signature