



CERTIFICATION by CUSTODIAN of RECORDS  
Tucson Police Department Crime Laboratory


I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-001165 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 4.13.2007 Cal 1 0.100 AC Cal 2 0.099 AC

Between the dates of 3.15.2007 and 4.13.2007 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on                     .  
The instrument was returned to service on                     .





Terry S. Gallegos

4.24.2007

ADPS QAS Permit # 33169

SUBSCRIBED AND SWORN to before me this 24, day of April, 2007.

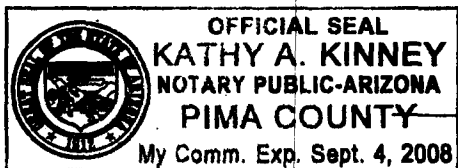

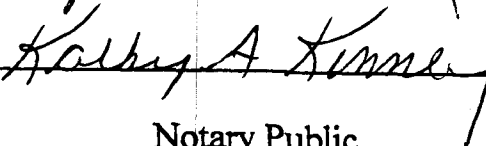

Notary Public

\*Includes documents specified in A.A.C. R13-10-104.A.5

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

## EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

10 of 8  
Tsh  
mr

## STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Terry Gallegos 28847 AGENCY Tucson Police DepartmentDATE 4.13.2007 TIME 1204INTOXILYZER SERIAL # 80-001165 LOCATION ODS

(✓) 1. Display reads "PUSH BUTTON TO START"

## DIAGNOSTIC TESTS

(✓) 1. Clock time check.  
(✓) 2. Date check.

## OPERATIONAL TESTS

(✓) 1. Alcohol-free subject test result 0.000 AC.  
(✓) 2. Error recognition logic system functioning. ✓✓  
Not a Successfully Completed Test Sequence printed  
(✓) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.  
(✓) 4. Standard Calibration Check standard 0.100 AC  
Result: 0.099 ACInstrument is operating properly and accurately. YES ✓ NO   COMMENTS Moved clock + 3 min  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE



DPS Form Exh G-4 (Rev. 05-01)

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number : 80-001165  
04/13/2007

12:06:27

2058  
Tsh

Standard Lot#: 630601I  
Last Changed By: J. COOMBS #46160

QAS: T. GALLEGOS #28847  
TUCSON PD CRIME LAB

Operator: T. GALLEGOS #28847  
TUCSON PD CRIME LAB

Subject: SQAP, SQAP  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:07:19
Diagnostic Test	Pass	12:07:46
Air Blank	0.000	12:08:14
0.100 Cal Check	0.099	12:08:32
Air Blank	0.000	12:09:03
Subject Test	0.000	12:09:22
Air Blank	0.000.	12:09:49
Five Minute Wait	ABT*	
Air Blank	0.000	12:10:27

\*Sequence Aborted

### Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number : 80-001165

04/13/2007

12:11:42

30f8  
184m

Standard Lot#: 630601I

Last Changed By: J. COOMBS

#46160

QAS: T. GALLEGOS

#28847

TUCSON PD CRIME LAB

Operator: T. GALLEGOS

#28847

TUCSON PD CRIME LAB

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:12:28
Diagnostic Test	Pass	12:12:55
Air Blank	0.000	12:13:22
0.100 Cal Check	0.101	12:13:41
Air Blank	RFI*	12:13:50
Air Blank	0.000	12:14:18

\*RFI Detect

### Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number : 80-001165  
04/13/2007

12:14:28

4 of 8  
Bham

Standard Lot#: 630601I  
Last Changed By: J. COOMBS #46160

QAS: T. GALLEGOS #28847  
TUCSON PD CRIME LAB

Operator: T. GALLEGOS #28847  
TUCSON PD CRIME LAB

Subject: SQAP, SQAP  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:15:59
Diagnostic Test	Pass	12:16:27
Air Blank	IPS*	12:16:33
Air Blank	0.000	12:17:02

\*Improper Sample

### Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number : 80-001165  
04/13/2007

12:17:40

50f8  
Bh

Standard Lot#: 630601I  
Last Changed By: J. COOMBS #46160

QAS: T. GALLEGOS #28847  
TUCSON PD CRIME LAB

Operator: T. GALLEGOS #28847  
TUCSON PD CRIME LAB

Subject: SQAP, SQAP  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:18:27
Diagnostic Test	Pass	12:18:55
Air Blank	0.000	12:19:22
0.100 Cal Check	0.099	12:19:41
Air Blank	0.000	12:20:11
Subject Test	0.017*	12:23:20
Air Blank	0.000	12:23:50
Air Blank	0.000	12:24:17
Subject Test	XXX**	12:24:38
Air Blank	0.000	12:25:12

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

### Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-001165

04/13/2007

12:25:46


Standard Lot#: 630601I

Last Changed By: J. COOMBS #46160

QAS: T. GALLEGOS #28847

TUCSON PD CRIME LAB

Test	g/210L	Time
Air Blank	0.000	12:26:13
Cal Check	0.099	12:26:32
Air Blank	0.000	12:27:02

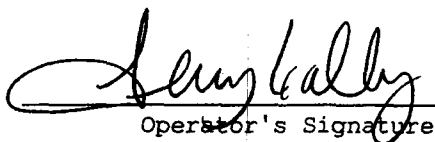  
Operator's Signature

6058  
TGM

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY


STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 800070f8  
TSHM

## STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Terry Gallegos 28847 AGENCY Tucson Police Department  
DATE 4-13-2007 TIME 1204  
Intoxilyzer Serial # 80-001165 Location ODS

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 100 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

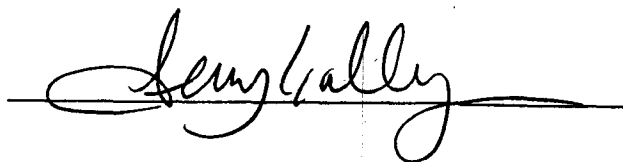

DPS Form Exh G-2 (Rev. 05-01)



INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-001165

04/13/2007

12:04:57

8058  
TS/ro

Standard Lot#: 630601I

Last Changed By: J. COOMBS #46160

QAS: T. GALLEGOS #28847

TUCSON PD CRIME LAB

Test	g/210L	Time
Air Blank	0.000	12:05:24
Cal Check	0.100	12:05:43
Air Blank	0.000	12:06:12

  
Operator's Signature