



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory

M

10-25-07

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-001199 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 9.19.2007 Cal 1 0.097 AC Cal 2 0.096 AC

Between the dates of 8.17.2007 and 9.19.2007 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on —.
The instrument was returned to service on —.

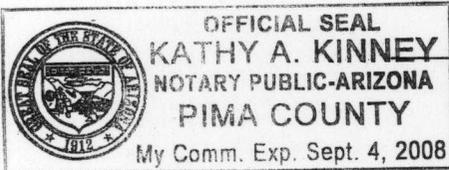
Terry S. Gallegos

Terry S. Gallegos

10.25.2007

ADPS QAS Permit # 33169

SUBSCRIBED AND SWORN to before me this 25, day of October, 2007.



Kathy A Kinney

Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

CU
10-25-07

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

10 of 9
TS4

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Terry Gallegos 28847 AGENCY Tucson Police Department
DATE 9-19-2007 TIME 1753
INTOXILYZER SERIAL # 80-001199 LOCATION DUI HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed ✓✓✓
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 096 AC

Instrument is operating properly and accurately. YES NO

COMMENTS Ex G-2 performed at 33 days. TS4

SIGNATURE Terry Gallegos

CM

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 8C-001199
09/19/2007 18:06:03

2079
T84

Standard Lot#: 627101G
Last Changed By: T. GALLEGOS #28847

DAS: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Operator: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Subject: SOAP, SOAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	18:06:53
Diagnostic Test	Pass	18:07:22
Air Blank	0.000	18:07:49
0.100 Cal Check	0.097	18:08:08
Air Blank	0.000	18:08:37
Subject Test	0.000	18:09:16
Air Blank	0.000	18:09:43
Five Minute Wait	ABT*	
Air Blank	0.000	18:10:17

*Sequence Aborted

Not a Successfully
Completed
Test Sequence

]

Cu

3079
JSH

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-001199
09/19/2007 18:11:47

Standard Lot#: 6271016
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Operator: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Subject: SOAP, SOAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	18:12:50
Diagnostic Test	Pass	18:13:19
Air Blank	RF1*	18:13:42
Air Blank	IPS**	18:13:55

*RF: Detect
**Improper Sample

Not a Successfully
Completed
Test Sequence

CM

4 of 9

TS4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-001199
09/19/2007 18:14:05

Standard Lot#: 627101G
Last Changed By: T. GALLEGOS #28847

OAS: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Operator: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Subject: SOAP, SOAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	gr210L	Time
Air Blank	0.000	18:15:02
Diagnostic Test	Pass	18:15:31
Air Blank	0.000	18:15:58
0.100 Cal Check	0.097	18:16:17
Air Blank	0.000	18:16:46
Subject Test	0.252*	18:19:55
Air Blank	0.000	18:20:27
Air Blank	0.000	18:20:54
Subject Test	XXX**	18:21:13
Air Blank	0.000	18:21:47

*Deficient Sample
**Invalid Sample
Begin new deprivation period

Not a Successfully
Completed
Test Sequence

1

CM

INTOXILYZER 6000
Location: TUCSON POLICE DEPT
Serial Number: 80-201199
03/19/2007 18:22:51

50f9
B4

Standard Lot#: 627101G
Last Changed By: T. GALLEGOS #28847

OAS: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Test	g/210L	Time
Air Blank	0.000	18:23:18
Cal Check	0.096	18:23:37
Air Blank	0.000	18:24:06

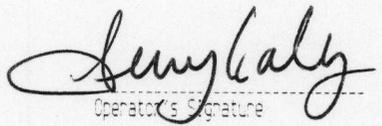

Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

CM
10-25-07

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

leaf 9
TSH

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Terry Gallegos 28847 AGENCY Tucson Police Department
DATE 9-19-2007 TIME 1753
Intoxilyzer Serial # 80-00 1199 Location DUI HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 097 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Terry Gallegos

DPS Form Exh G-2 (Rev. 05-01)

CU

7079

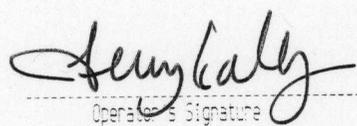
TS4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-001199
09/19/2007 17:53:48

Standard Lot#: 627101G
Last Changed By: T. GALLEGOS #28847

OAS: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Test	g/210L	Time
Air Blank	0.000	17:54:15
Cal Check	0.097	17:54:34
Air Blank	0.000	17:55:03


Operator's Signature



TUCSON POLICE DEPARTMENT
CRIME LABORATORY

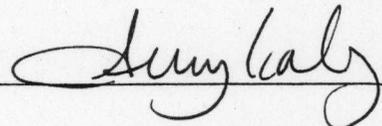
CM
10-25-07

INTOXILYZER SERVICE RECORD
FOR
CALIBRATION GAS TANK CHANGE

8079
TS4

Date: 9-19-2007
 QAS: Terry Gallegos 28847
 Intoxilyzer Serial Number: 80-001199
 New Lot Number: 719801I
 New Expiration Date: 7/23/2009

- (✓) 1. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 2. Remove the old gas tank and install the new one.
- (✓) 3. Hit the "ESC" key twice and swipe the QAS card.
- (✓) 4. Go to the "M-Maintenance" menu and select "S-Standard Change."
 Select "D" for dry gas and enter the following information:
 Enter Target Value: 0.100
 Enter Control Lot #: From the tank label
 Enter Exp Date: From the tank label (mm/dd/yyyy)
 Edit info Y/N? Y or N
 Update Std Info? Y ENTER
 "Please wait saving..."
- (✓) 5. Hit the "ESC" key twice.
- (✓) 6. Go to the "M-Maintenance" menu and select "T-Control Testing."
 Select "D" for dry control test. After selection is made press ENTER.
- (✓) 7. Air blank completed.
- (✓) 8. Calibration check completed. Test results 0. 098 AC.
- (✓) 9. Air blank completed.
- (✓) 10. Remove and sign printed record. Attach the record to the completed checklist.

SIGNATURE 

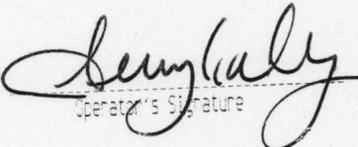
CM
90f9
TS4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-001199
19/19/2007 18:27:59

Standard Lot#: 7198011
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD CRIME LAB

Test	g/210L	Time
Air Blank	0.000	18:28:27
Cal Check	0.096	18:28:46
Air Blank	0.000	18:29:15


Operator's Signature