



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
1306 W. Miracle Mile, Tucson, AZ 85705

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-002201 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

WLL
6/29/16

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 6-20-2016 Cal 1 0.099 AC Cal 2 0.099 AC

Between the dates of 5-19-2016 and 6-20-2016 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on —.
The instrument was returned to service on —.

Terry Gallegos

Terry S. Gallegos


6-29-2016

ADPS QAS Permit # 33169

SUBSCRIBED AND SWORN to before me this 29th, day of June, 2016.

Elma Escarcega

Notary Public

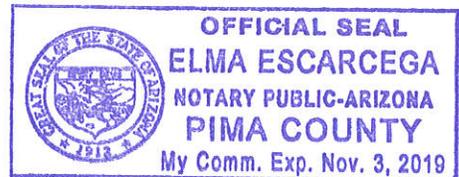

*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

10 of 9
TS4
WLL
6/29/16

QA SPECIALIST Terry Gallegos 28847 AGENCY Tucson Police Department

DATE 6-20-2016 TIME 1510

INTOXILYZER SERIAL # 80-002201 LOCATION Crime Lab

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 099 AC

Instrument is operating properly and accurately. YES NO

COMMENTS > 31 days between checks TS4

SIGNATURE Terry Gallegos

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-002201
Core Version: 8105.48
06/20/2016

15:21:29

2089
B4
WLL

Standard Lot#: 15615100A1
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:22:25
Diagnostic Test	Pass	15:23:00
Air Blank	0.000	15:23:27
0.100 Cal Check	0.099	15:23:48
Air Blank	0.000	15:24:18
Subject Test	0.000	15:24:32
Air Blank	0.000	15:25:00
Wait	ABT*	
Air Blank	0.000	15:25:34

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-002201
Core Version: 8105.48
06/20/2016 15:26:34

3 of 9
Dy
WLL

Standard Lot#: 15615100A1
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:27:38
Diagnostic Test	Pass	15:28:13
Air Blank	0.000	15:28:41
0.100 Cal Check	RFI*	15:28:55
Air Blank	IPS**	15:29:04

*RFI Detect

**Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-002201
Core Version: 8105.48
06/20/2016

15:31:26

4 of 9
TS4
WLL

Standard Lot#: 15615100A1
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:32:12
Diagnostic Test	Pass	15:32:47
Air Blank	0.000	15:33:14
0.100 Cal Check	0.099	15:33:35
Air Blank	0.000	15:34:05
Subject Test	0.124*	15:37:13
Air Blank	0.000	15:37:45
Air Blank	0.000	15:38:12
Subject Test	0.199**	15:38:43
Air Blank	0.000	15:39:15
Wait		
Air Blank	0.000	15:44:11
Subject Test	0.000**	15:45:13
Air Blank	0.000	15:45:41

*Deficient Sample
**No .020 agreement

Ran out of breath on Invalid sample attempt. Repeated after 5 min wait. TS4

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-002201
Core Version: 8105.48
06/20/2016

15:50:11

50f9
T84
WLL

Standard Lot#: 15615100A1
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST,SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:50:59
Diagnostic Test	Pass	15:51:34
Air Blank	0.000	15:52:01
0.100 Cal Check	0.099	15:52:22
Air Blank	0.000	15:52:52
Subject Test	XXX*	15:53:25
Air Blank	0.000	15:53:58

*Invalid Sample
Begin new deprivation period

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-002201
Core Version: 8105.48
06/20/2016 15:54:36

*60f 9
DJ
WLL*

Standard Lot#: 15615100A1
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	15:55:05
0.100 Cal Check	0.099	15:55:26
Air Blank	0.000	15:55:56

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

70f9
TS4
WLL
6/29/16

QA Specialist Terry Gallegos 28847 AGENCY Tucson Police Department
DATE 6.20.2016 TIME 1510
Intoxilyzer Serial # 80-002201 Location CrimeLab

- ✓ (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- ✓ (✓) 2. Intoxilyzer 8000 display reads "~~PUSH BUTTON TO START~~"
"Contact QAS 30 Day Prev Maint"^{TS4}
- ✓ (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ✓ (✓) 4. Air blank completed.
- ✓ (✓) 5. Calibration check completed. Test results 0. 099 AC.
- ✓ (✓) 6. Air blank completed. 0.100
- ✓ (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Terry Gallegos

DPS Form Exh G-2 (Rev. 05-01)

Input timed out, repeated to update standards and preventative maintenance.
TS4

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-002201
Core Version: 8105.48
06/20/2016 15:10:48

80f9
B4
WLL

Standard Lot#: 15615100A1
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	15:11:48
0.100 Cal Check	0.099	15:12:08
Air Blank	0.000	15:12:39
Air Blank	0.000	15:15:07

*Input Timed Out

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-002201
Core Version: 8105.48
06/20/2016 15:17:33

90f9
B4
WLL

Standard Lot#: 15615100A1
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	15:18:04
0.100 Cal Check	0.100	15:18:25
Air Blank	0.000	15:18:55

Preventative Maintenance
Performed -- Timer Reset