



# CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory  
1306 W. Miracle Mile, Tucson, AZ 85705

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-002261 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

TS4  
12-12-2011

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 12-8-11 Cal 1 0.098 AC Cal 2 0.097 AC

Between the dates of 11-10-11 and 12-8-11 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.  
The instrument was returned to service on N/A.

Clare Conley

Clare L. Conley


12-8-11

ADPS QAS Permit # 33314

SUBSCRIBED AND SWORN to before me this 8th, day of December, 20 11.

Ann L. Beecroft

Notary Public

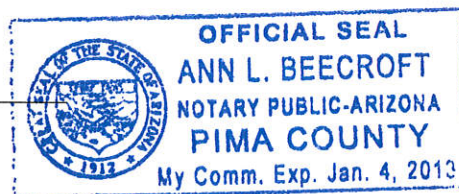

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

158  
An

174  
12-12-2011

QA SPECIALIST Clare Conley AGENCY Tucson Police Department  
DATE 12-8-11 TIME 0743  
INTOXILYZER SERIAL # 80-002261 LOCATION ODW DUI HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.  
(✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.  
(✓) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed  
(✓) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.  
(✓) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 097 AC

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS

Diagnostic fail (voltage/current test): checked  
connection of plug in electrical outlet.

SIGNATURE

Clare Conley

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number : 80-002261  
12/08/2011

08:15:28

258  
CM  
154

Standard Lot#: 04911100A1  
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517  
TUCSON PD

Operator: C. CONLEY #34517  
TUCSON PD

Subject: TEST, SQAP

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:16:21
Diagnostic Test	Fail*	08:16:24
Air Blank	0.000	08:16:53

\* Voltage/Current Test

Not a Successfully Completed Test Sequence

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number : 80-002261  
12/08/2011

08:16:57

3568  
cm  
154

Standard Lot#: 04911100A1  
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517  
TUCSON PD

Operator: C. CONLEY #34517  
TUCSON PD

Subject: TEST, SQAP  
DOB: 11/11/1111  
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:17:45
Diagnostic Test	Pass	08:18:13
Air Blank	0.000	08:18:40
0.100 Cal Check	0.098	08:18:59
Air Blank	0.000	08:19:28
Subject Test	0.000	08:19:53
Air Blank	ABT*	08:20:00
Air Blank	RFI**	08:20:07

\*Sequence Aborted

\*\*RFI Detect

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number : 80-002261  
12/08/2011

08:21:05

4568  
Cu  
B4

Standard Lot#: 04911100A1  
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517  
TUCSON PD

Operator: C. CONLEY #34517  
TPD

Subject: TEST, SQAP  
DOB: 11/11/1111  
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	08:21:50
Air Blank	0.000	08:22:18

\*Improper Sample

**Not a Successfully Completed Test Sequence**



INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number : 80-002261  
12/08/2011

08:22:25

508  
On  
ph

Standard Lot#: 04911100A1  
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517  
TUCSON PD

Operator: C. CONLEY #34517  
TUCSON PD

Subject: TEST,SQP  
DOB: 11/11/1111  
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:23:10
Diagnostic Test	Pass	08:23:38
Air Blank	0.000	08:24:05
0.100 Cal Check	0.098	08:24:24
Air Blank	0.000	08:24:54
Subject Test	0.075*	08:28:02
Air Blank	0.000	08:28:33
Air Blank	0.000	08:29:01
Subject Test	XXX**	08:29:39
Air Blank	0.000	08:30:13

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location: TUCSON PD

Serial Number: 80-002261

12/08/2011

08:30:34


-----  
Standard Lot#: 04911100A1

Last Changed By: C. CONLEY #34517  
-----

QAS: C. CONLEY #34517

TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	08:31:01
Cal Check	0.097	08:31:20
Air Blank	0.000	08:31:49



Operator's Signature

6268  
Cn

Bh

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Clare Conley AGENCY Tucson Police Department  
DATE 12-8-11 TIME 0745  
Intoxilyzer Serial # 80-002261 Location ODW Duu HQ

- ( ✓ ) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C  $\pm$  0.2°C
- ( ✓ ) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ( ✓ ) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ( ✓ ) 4. Air blank completed.
- ( ✓ ) 5. Calibration check completed. Test results 0. 098 AC.
- ( ✓ ) 6. Air blank completed.
- ( ✓ ) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Clare Conley

DPS Form Exh G-2 (Rev. 05-01)



INTOXILYZER 8000

Location: TUCSON PD

Serial Number: 80-002261

12/08/2011

07:45:34

-----  
Standard Lot#: 04911100A1

Last Changed By: C. CONLEY #34517  
-----

QAS: C. CONLEY #34517

TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	07:46:01
Cal Check	0.098	07:46:20
Air Blank	0.000	07:46:50



\_\_\_\_\_  
Operator's Signature