



CERTIFICATION by CUSTODIAN of RECORDS  
 Tucson Police Department Crime Laboratory  
 1306 W. Miracle Mile, Tucson, AZ 85705

*TJH  
6/2-2012*

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-002261 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 5/24/12 Cal 1 0.098 AC Cal 2 0.098 AC

Between the dates of 4/27/12 and 5/24/12 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on -.  
 The instrument was returned to service on -.

*Sarah Cione*  
 Sarah L. Cione


5/24/12

ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 24<sup>th</sup>, day of May, 2012.

*Edma Escarcega*

Notary Public

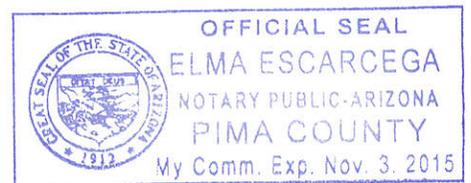

\*Includes documents specified in A.A.C. R13-10-104.A.5

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

EXHIBIT G-4

1 of 9 sc

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD QUALITY ASSURANCE PROCEDURE

TS4  
6-12-2012

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department

DATE 5/24/12 TIME 924

INTOXILYZER SERIAL # 80-002261 LOCATION DUI HQ

(  ) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (  ) 1. Clock time check.
- (  ) 2. Date check.

OPERATIONAL TESTS

- (  ) 1. Alcohol-free subject test result 0. 000 AC.
- (  ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (  ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (  ) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 098 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS

---



---



---



---

SIGNATURE Sarah Cione

2 of 9 sc

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number : 80-002261  
05/24/2012

09:27:18

134

Standard Lot#: 23511100A2  
Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SQAP, SQAP  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:28:07
Diagnostic Test	Pass	09:28:34
Air Blank	0.000	09:29:02
0.100 Cal Check	0.098	09:29:20
Air Blank	0.000	09:29:50
Subject Test	0.000	09:30:04
Air Blank	0.000	09:30:31
Five Minute Wait	ABT*	
Air Blank	0.000	09:31:40

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

3 of 9 sc

Bh

INTOXILYZER 8000  
 Location: TUCSON PD  
 Serial Number : 80-002261  
 05/24/2012 09:32:45

---

Standard Lot#: 23511100A2  
 Last Changed By: S. CIONE #50616

---

QAS: S. CIONE #50616  
 TUCSON PD

---

Operator: S. CIONE #50616  
 TUCSON PD

---

Subject: SQAP, SQAP  
 DOB: 11/11/1111  
 Sex: F Weight: 111

---

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	09:33:06
Air Blank	IPS**	09:33:13

\*RFI Detect  
 \*\*Improper Sample

**Not a Successfully Completed Test Sequence**

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

4 of 9sc

Bh

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number : 80-002261  
05/24/2012 09:34:32

Standard Lot#: 23511100A2  
Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SQAP, SQAP  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:35:16
Diagnostic Test	Pass	09:35:44
Air Blank	0.000	09:36:11
0.100 Cal Check	0.099	09:36:30
Air Blank	0.000	09:36:59
Subject Test	0.042*	09:40:08
Air Blank	0.000	09:40:39
Air Blank	0.000	09:41:07
Subject Test	XXX**	09:41:30
Air Blank	0.000	09:42:04

\*Deficient Sample  
\*\*Invalid Sample  
Begin new deprivation period

**Not a Successfully Completed Test Sequence**

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

5 of 9 sc  
134

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002261  
05/24/2012 09:42:21

-----  
Standard Lot#: 23511100A2  
Last Changed By: S. CIONE #50616  
-----

QAS: S. CIONE #50616  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	09:42:48
Cal Check	0.098	09:43:07
Air Blank	0.000	09:43:36


  
-----  
Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

6 of 9 sc

TBY  
6.12.2012

QA Specialist Sarah Cione AGENCY Tucson Police Department  
DATE 5/24/12 TIME 924  
Intoxilyzer Serial # 80-002261 Location DUI HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 098 AC.
- (✓) 6. Air blank completed.
- ( ) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

DPS Form Exh G-2 (Rev. 05-01)

7 of 9 sc

TS4

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002261  
05/24/2012 09:24:57

-----  
Standard Lot#: 23511100A2  
Last Changed By: S. CIONE #50616  
-----

QAS: S. CIONE #50616  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	09:25:25
Cal Check	0.098	09:25:43
Air Blank	0.000	09:26:13

Sarah Cione  
Operator's Signature



TUCSON POLICE DEPARTMENT  
CRIME LABORATORY

8 of 9 SC

T54  
6.12.2012

INTOXILYZER SERVICE RECORD  
FOR  
CALIBRATION GAS TANK CHANGE

Date: 5/24/12  
 QAS: Sarah Cione  
 Intoxilyzer Serial Number: 80-002261  
 New Lot Number: 23511100A2  
 New Expiration Date: 11/1/2013

- (✓) 1. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 2. Remove the old gas tank and install the new one.
- (✓) 3. Hit the "ESC" key twice and swipe the QAS card.
- (✓) 4. Go to the "M-Maintenance" menu and select "S-Standard Change."  
 Select "D" for dry gas and enter the following information:  
     Enter Target Value: 0.100  
     Enter Control Lot #: From the tank label  
     Enter Exp Date: From the tank label (mm/dd/yyyy)  
     Edit info Y/N? Y or N  
     Update Std Info? Y ENTER  
     "Please wait saving..."
- (✓) 5. Hit the "ESC" key twice.
- (✓) 6. Go to the "M-Maintenance" menu and select "T-Control Testing."  
 Select "D" for dry control test. After selection is made press ENTER.
- (✓) 7. Air blank completed.
- (✓) 8. Calibration check completed. Test results 0. 098 AC.
- (✓) 9. Air blank completed.
- (✓) 10. Remove and sign printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

9 of 9  
sc

154

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002261  
05/24/2012 09:49:23

-----  
Standard Lot#: 23511100A2  
Last Changed By: S. CIONE #50616  
-----

QAS: S. CIONE #50616  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	09:49:50
Cal Check	0.098	09:50:09
Air Blank	0.000	09:50:39

Sarah Cione  
Operator's Signature