



CERTIFICATION by CUSTODIAN of RECORDS  
Tucson Police Department Crime Laboratory  
1306 W. Miracle Mile, Tucson, AZ 85705

TS4  
6.27.2013

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-002265 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 6/20/13 Cal 1 0.101 AC Cal 2 0.099 AC

Between the dates of 5/23/13 and 6/20/13 the instrument was operating properly and accurately.


The instrument was taken out of service for repair on -  
The instrument was returned to service on -

Sarah Cione  
Sarah L. Cione

6/25/13  
ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 25<sup>th</sup>, day of June, 2013.

Elma Escarcega  
Notary Public

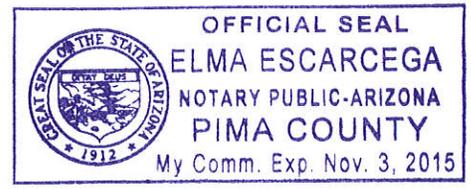

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

1 of 7 sc  
TS4  
6-27-2013

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department

DATE 6/20/13 TIME 1026

INTOXILYZER SERIAL # 80-002265 LOCATION DUIHQ

(  ) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (  ) 1. Clock time check.
- (  ) 2. Date check.

OPERATIONAL TESTS

- (  ) 1. Alcohol-free subject test result 0. 000 AC.
- (  ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (  ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (  ) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 099 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS

---



---



---



---

SIGNATURE Sarah Cione

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002265  
Core Version: 8105.48  
06/20/2013

10:28:25

*2 of 7sc*  
*TS4*

---

Standard Lot#: 09312100A1  
Last Changed By: S. CIONE #50616

---

QAS: S. CIONE #50616  
TUCSON PD

---

Operator: S. CIONE #50616  
TUCSON PD

---

Subject: SQAP, SQAP  
DOB: 11/11/1980  
Sex: F Weight: 111

---

15 Minute Deprivation Period? Yes

---

| Test            | g/210L | Time     |
|-----------------|--------|----------|
| Air Blank       | 0.000  | 10:29:21 |
| Diagnostic Test | Pass   | 10:29:56 |
| Air Blank       | 0.000  | 10:30:23 |
| 0.100 Cal Check | 0.101  | 10:30:44 |
| Air Blank       | 0.000  | 10:31:14 |
| Subject Test    | 0.000  | 10:31:30 |
| Air Blank       | 0.000  | 10:31:58 |
| Wait            | ABT*   |          |
| Air Blank       | 0.000  | 10:32:43 |

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002265  
Core Version: 8105.48  
06/20/2013

10:34:53

3 of 7  
TS4

---

Standard Lot#: 09312100A1  
Last Changed By: S. CIONE #50616

---

QAS: S. CIONE #50616  
TUCSON PD

---

Operator: S. CIONE #50616  
TUCSON PD

---

Subject: SQAP, SQAP  
DOB: 11/11/1980  
Sex: F Weight: 111

---

15 Minute Deprivation Period? Yes

---

| Test            | g/210L | Time     |
|-----------------|--------|----------|
| Air Blank       | 0.000  | 10:36:12 |
| Diagnostic Test | Pass   | 10:36:47 |
| Air Blank       | 0.000  | 10:37:15 |
| 0.100 Cal Check | RFI*   | 10:37:33 |
| Air Blank       | IPS**  | 10:37:43 |

\*RFI Detect  
\*\*Improper Sample

### Not a Successfully Completed Test Sequence

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002265  
Core Version: 8105.48  
06/20/2013

10:41:22

4 of 7 sc  
TS4

---

Standard Lot#: 09312100A1  
Last Changed By: S. CIONE #50616

---

QAS: S. CIONE #50616  
TUCSON PD

---

Operator: S. CIONE #50616  
TUCSON PD

---

Subject: SQAP, SQAP  
DOB: 11/11/1980  
Sex: F Weight: 111

---

15 Minute Deprivation Period? Yes

---

| Test            | g/210L | Time     |
|-----------------|--------|----------|
| Air Blank       | 0.000  | 10:42:17 |
| Diagnostic Test | Pass   | 10:42:52 |
| Air Blank       | 0.000  | 10:43:19 |
| 0.100 Cal Check | 0.101  | 10:43:40 |
| Air Blank       | 0.000  | 10:44:10 |
| Subject Test    | 0.252* | 10:47:17 |
| Air Blank       | 0.000  | 10:47:50 |
| Air Blank       | 0.000  | 10:48:17 |
| Subject Test    | XXX**  | 10:48:46 |
| Air Blank       | 0.000  | 10:49:20 |

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002265  
Core Version: 8105.48  
06/20/2013 10:50:12

5 of 7 sc  
TS4

-----  
Standard Lot#: 09312100A1  
Last Changed By: S. CIONE #50616  
-----

QAS: S. CIONE #50616  
TUCSON PD  
-----

Operator: S. CIONE #50616  
TUCSON PD  
-----

| Test            | g/210L | Time     |
|-----------------|--------|----------|
| Air Blank       | 0.000  | 10:50:40 |
| 0.100 Cal Check | 0.099  | 10:51:01 |
| Air Blank       | 0.000  | 10:51:31 |

Preventative Maintenance  
Performed -- Timer Reset

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

6 of 7 sc  
TJG  
6.27.2013

QA Specialist Sarah Cione AGENCY Tucson Police Department

DATE 6/20/13 TIME 1026

Intoxilyzer Serial # 80-002265 Location DUI HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 101 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002265  
Core Version: 8105.48  
06/20/2013 10:26:58

7 of 7 sc  
TS4

-----  
Standard Lot#: 09312100A1  
Last Changed By: S. CIONE #50616  
-----

QAS: S. CIONE #50616  
TUCSON PD  
-----

Operator: S. CIONE #50616  
TUCSON PD  
-----

| Test            | g/210L | Time     |
|-----------------|--------|----------|
| Air Blank       | 0.000  | 10:27:26 |
| 0.100 Cal Check | 0.101  | 10:27:47 |
| Air Blank       | 0.000  | 10:28:17 |

Preventative Maintenance  
Performed -- Timer Reset