



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory  
1306 W. Miracle Mile, Tucson, AZ 85705

TS4  
2-11-2015


I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-002345 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 2-6-2015 Cal 1 0.101 AC Cal 2 0.099 AC

Between the dates of 1-9-2015 and 2-6-2015 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on -.  
The instrument was returned to service on -.

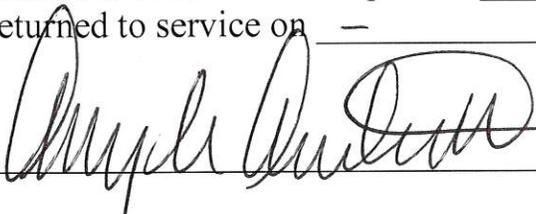  
\_\_\_\_\_  
Amy L. Autret


2-10-2015

ADPS QAS Permit # 33718

SUBSCRIBED AND SWORN to before me this 10<sup>th</sup>, day of February, 2015.

  
\_\_\_\_\_

Notary Public

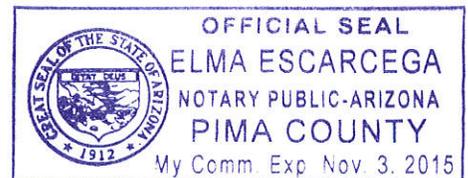

\*Includes documents specified in A.A.C. R13-10-104.A.5

1 of 9  
dd

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

TS4  
2.11.2015

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Amy Autret 53546 AGENCY Tucson Police Department

DATE 2-6-2015 TIME 1356

INTOXILYZER SERIAL # 80-002345 LOCATION 000

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 099 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS

---



---



---



---

SIGNATURE

2 of 9  
add  
TS4

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
02/06/2015 13:59:56

---

Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546

---

QAS: A. AUTRET #53546  
TUCSON PD

---

Operator: A. AUTRET #53546  
TUCSON PD

---

Subject: TEST,SQAP  
DOB: 11/12/1987  
Sex: F Weight: 135

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	14:00:55
Diagnostic Test	Pass	14:01:30
Air Blank	0.000	14:01:57
0.100 Cal Check	0.101	14:02:18
Air Blank	0.000	14:02:48
Subject Test	0.000	14:03:12
Air Blank	0.000	14:03:39
Wait	ABT*	
Air Blank	0.000	14:04:14

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

30F9  
JLB  
B4

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
02/06/2015 14:05:12

---

Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546

---

QAS: A. AUTRET #53546  
TUCSON PD

---

Operator: A. AUTRET #53546  
TUCSON PD

---

Subject: TEST,SQAP  
DOB: 11/12/1987  
Sex: F Weight: 135

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	14:06:18
Diagnostic Test	Pass	14:06:53
Air Blank	0.000	14:07:20
0.100 Cal Check	RFI*	14:07:34
Air Blank	IPS**	14:07:41

\*RFI Detect  
\*\*Improper Sample

**Not a Successfully Completed Test Sequence**

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

4 of 9  
Ab  
B4

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
02/06/2015 14:08:16

---

Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546

---

QAS: A. AUTRET #53546  
TUCSON PD

---

Operator: A. AUTRET #53546  
TUCSON PD

---

Subject: TEST, SQAP  
DOB: 11/12/1987  
Sex: F Weight: 135

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	14:09:25
Diagnostic Test	Pass	14:10:00
Air Blank	0.000	14:10:27
0.100 Cal Check	0.101	14:10:48
Air Blank	0.000	14:11:18
Subject Test	0.258*	14:14:25
Air Blank	0.000	14:14:58
Air Blank	0.000	14:15:26
Subject Test	XXX**	14:15:47
Air Blank	0.000	14:16:21

\*Deficient Sample  
\*\*Invalid Sample  
Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

02/06/2015

14:17:09

5 of 9  
all  
TS4

-----  
Standard Lot#: 25414100A4

Last Changed By: A. AUTRET #53546  
-----

QAS: A. AUTRET #53546

TUCSON PD  
-----

Operator: A. AUTRET #53546

TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	14:17:41
0.100 Cal Check	0.099	14:18:02
Air Blank	0.000	14:18:31

Preventative Maintenance  
Performed -- Timer Reset

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

leaf 9  
JLB

ARIZONA DEPARTMENT OF PUBLIC SAFETY

TS4  
2.11.2015

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Amy Auct 53546 AGENCY Tucson Police Department

DATE 2-6-2015 TIME 1356

Intoxilyzer Serial # 80-002345 Location OPD

- ( ✓ ) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution 100 AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- ( ✓ ) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ( ✓ ) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ( ✓ ) 4. Air blank completed.
- ( ✓ ) 5. Calibration check completed. Test results 0. 101 AC.
- ( ✓ ) 6. Air blank completed.
- ( ✓ ) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE



DPS Form Exh G-2 (Rev. 05-01)

7 of 9  
old  
By

INTOXILYZER 8000  
Location:  
Serial Number: 80-002345  
Core Version: 8105.48  
02/06/2015 13:56:40

-----  
Standard Lot#: 25414100A4  
Last Changed By: A. AUTRET #53546  
-----

QAS: A. AUTRET #53546  
TUCSON PD  
-----

Operator: A. AUTRET #53546  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	13:57:12
0.100 Cal Check	0.101	13:57:33
Air Blank	0.000	13:58:03

Preventative Maintenance  
Performed -- Timer Reset



TUCSON POLICE DEPARTMENT  
CRIME LABORATORY

8 of 9  
TS4  
2.11.2015

INTOXILYZER SERVICE RECORD  
FOR  
CALIBRATION GAS TANK CHANGE

Date: 2-6-2015  
QAS: Amy Autret 53546  
Intoxilyzer Serial Number: 80-002345  
New Lot Number: 25414100A4  
New Expiration Date: 10/5/2016

- (✓) 1. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 2. Remove the old gas tank and install the new one.
- (✓) 3. Hit the "ESC" key twice and swipe the QAS card.
- (✓) 4. Go to the "M-Maintenance" menu and select "S-Standard Change." Select "D" for dry gas and enter the following information:  
 Enter Target Value: 0.100  
 Enter Control Lot #: From the tank label  
 Enter Exp Date: From the tank label (mm/dd/yyyy)  
 Edit info Y/N? Y or N  
 Update Std Info? Y ENTER  
 "Please wait saving..."
- (✓) 5. Hit the "ESC" key twice.
- (✓) 6. Go to the "M-Maintenance" menu and select "T-Control Testing." Select "D" for dry control test. After selection is made press ENTER.
- (✓) 7. Air blank completed.
- (✓) 8. Calibration check completed. Test results 0. 102 AC.
- (✓) 9. Air blank completed.
- (✓) 10. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

*Amy Autret*

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

02/06/2015

13:53:32

9 of 9  
add  
TSH

-----  
Standard Lot#: 25414100A4

Last Changed By: A. AUTRET #53546  
-----

QAS: A. AUTRET #53546

TUCSON PD  
-----

Operator: A. AUTRET #53546

TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	13:54:04
0.100 Cal Check	0.102	13:54:25
Air Blank	0.000	13:54:55

Preventative Maintenance NOT  
Performed -- Timer NOT Reset