



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
1306 W. Miracle Mile, Tucson, AZ 85705

TS4
11.3.2015

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-002345 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 10/15/2015 Cal 1 0.100 AC Cal 2 0.099 AC

Between the dates of 9/17/2015 and 10/15/2015 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on _____.
The instrument was returned to service on _____.

William L Loomis

William L. Loomis

10/22/2015

ADPS QAS Permit # 33720

SUBSCRIBED AND SWORN to before me this 22nd, day of October, 2015.

Edna Escarcega

Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

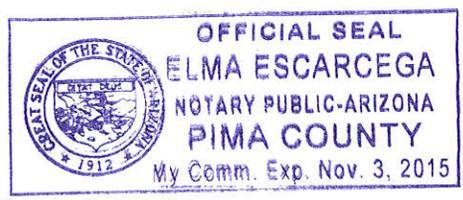


EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

lob 8
WLL
TJH 11.3.2015

QA SPECIALIST W. LOOMIS 53545 AGENCY Tucson Police Department
DATE 10/15/2015 TIME 12:31
INTOXILYZER SERIAL # 80-002345 LOCATION ODD

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 099 AC

Instrument is operating properly and accurately. YES NO

COMMENTS

SIGNATURE Will Loomis

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

10/15/2015

12:33:31

*2 of 8
WLL
TS4*

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

QAS: W. LOOMIS

#53545

TUCSON PD

Operator: W. LOOMIS

#53545

TUCSON PD

Subject: SQAP,TEST

DOB: 11/11/1987

Sex: M

Weight: 222

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:34:24
Diagnostic Test	Pass	12:34:59
Air Blank	0.000	12:35:27
0.100 Cal Check	0.100	12:35:47
Air Blank	0.000	12:36:17
Subject Test	0.000	12:36:39
Air Blank	0.000	12:37:06
Wait	ABT*	
Air Blank	0.000	12:37:41

*Sequence Aborted

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

10/15/2015

12:38:36

3 of 8
WU
T84

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

QAS: W. LOOMIS

#53545

TUCSON PD

Operator: W. LOOMIS

#53545

TUCSON PD

Subject: SQAP,TEST

DOB: 11/11/1987

Sex: M

Weight: 222

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:39:40
Diagnostic Test	Pass	12:40:15
Air Blank	0.000	12:40:42
0.100 Cal Check	RFI*	12:40:55
Air Blank	IPS**	12:41:03

*RFI Detect

**Improper Sample

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location:
Serial Number: 80-002345
Core Version: 8105.48
10/15/2015

12:41:16

*4 of 8
w/w
TSH*

Standard Lot#: 25414100A4
Last Changed By: A. AUTRET #53546

QAS: W. LOOMIS #53545
TUCSON PD

Operator: W. LOOMIS #53545
TUCSON PD

Subject: SQAP, TEST
DOB: 11/11/1987
Sex: M Weight: 222

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:42:09
Diagnostic Test	Pass	12:42:44
Air Blank	0.000	12:43:11
0.100 Cal Check	0.100	12:43:32
Air Blank	0.000	12:44:01
Subject Test	RFI*	12:45:43
Air Blank	0.000	12:46:18

*RFI Detect

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location:
Serial Number: 80-002345
Core Version: 8105.48
10/15/2015

12:46:22

Standard Lot#: 25414100A4
Last Changed By: A. AUTRET #53546

QAS: W. LOOMIS #53545
TUCSON PD

Operator: W. LOOMIS #53545
TUCSON PD

Subject: SQAP, TEST
DOB: 11/11/1987
Sex: M Weight: 222

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:47:20
Diagnostic Test	Pass	12:47:55
Air Blank	0.000	12:48:22
0.100 Cal Check	0.099	12:48:43
Air Blank	0.000	12:49:13
Subject Test	0.152*	12:52:20
Air Blank	0.000	12:52:53
Air Blank	0.000	12:53:21
Subject Test	XXX**	12:53:38
Air Blank	0.000	12:54:11

*Deficient Sample

**Invalid Sample

Begin new deprivation period

5 of 8
TSH
WLL

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

7 of 8
T84
WLV
11-3-2015

QA Specialist W. LOOMIS 53545 AGENCY Tucson Police Department
DATE 10/15/2015 TIME 12:31
Intoxilyzer Serial # 80-002345 Location ODD

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C.
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 100 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Will Loomis

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

