



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
1306 W. Miracle Mile, Tucson, AZ 85705

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-002345 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.


By
2-9-2016

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 2-5-16 Cal 1 0.102 AC Cal 2 0.101 AC

Between the dates of 1-8-16 and 2-5-16 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on —.
The instrument was returned to service on —.

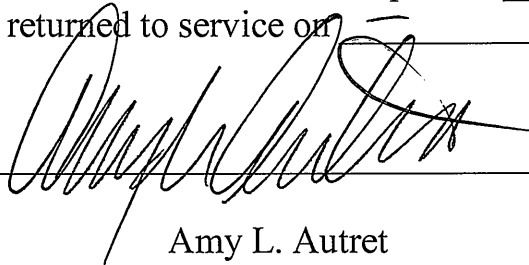


Amy L. Autret

2-9-16

ADPS QAS Permit # 33718


SUBSCRIBED AND SWORN to before me this 9th, day of February, 2016.

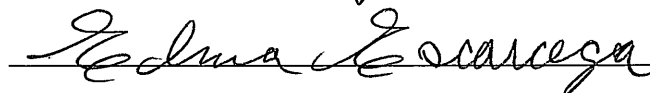

Edma Escarcega

Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

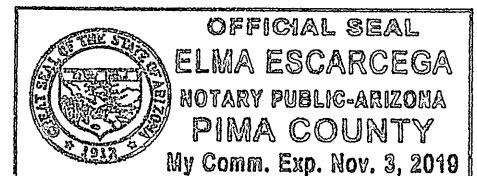

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

1 of 8
JLH
TSY
2-9-2016

QA SPECIALIST Amy Rutre 53546 AGENCY Tucson Police Department

DATE 2-5-16 TIME 1035

INTOXILYZER SERIAL # 80-002345 LOCATION 000

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
(✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
(✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 101 AC

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS

SIGNATURE



INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

02/05/2016

10:36:39

2068
JAB
TSH

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

QAS: A. AUTRET

#53546

TUCSON PD

Operator: A. AUTRET

#53546

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1987

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:37:32
Diagnostic Test	Pass	10:38:07
Air Blank	RFI*	10:38:13
Air Blank	0.000	10:38:42

*RFI Detect

Officer walking
by with radio
caused RFI.
Repeated negative
subject test/
Improper sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

02/05/2016

10:38:47

3 of 8
JL
B4

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

QAS: A. AUTRET

#53546

TUCSON PD

Operator: A. AUTRET

#53546

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1987

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:39:41
Diagnostic Test	Pass	10:40:16
Air Blank	0.000	10:40:44
0.100 Cal Check	0.101	10:41:04
Air Blank	0.000	10:41:34
Subject Test	0.000	10:41:51
Air Blank	0.000	10:42:19
Wait	ABT*	
Air Blank	0.000	10:42:54

*Sequence Aborted

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

02/05/2016

10:43:17

4 of 8
[Signature]
BH

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

QAS: A. AUTRET

#53546

TUCSON PD

Operator: A. AUTRET

#53546

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1987

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:44:10
Diagnostic Test	Pass	10:44:45
Air Blank	0.000	10:45:13
0.100 Cal Check	RFI*	10:45:27
Air Blank	IPS**	10:45:38

*RFI Detect

**Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

02/05/2016

10:45:43

5 of 8
JLB
TSH

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

QAS: A. AUTRET

#53546

TUCSON PD

Operator: A. AUTRET

#53546

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1987

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:46:40
Diagnostic Test	Pass	10:47:16
Air Blank	0.000	10:47:43
0.100 Cal Check	0.102	10:48:04
Air Blank	0.000	10:48:33
Subject Test	0.087*	10:51:41
Air Blank	0.000	10:52:13
Air Blank	0.000	10:52:41
Subject Test	XXX**	10:53:05
Air Blank	0.000	10:53:39

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

02/05/2016

10:53:54

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET #53546

QAS: A. AUTRET #53546

TUCSON PD

Operator: A. AUTRET #53546

TUCSON PD

Test	g/210L	Time
Air Blank	0.000	10:54:23
0.100 Cal Check	0.101	10:54:44
Air Blank	0.000	10:55:13

Preventative Maintenance

Performed -- Timer Reset

6 of 8
ALD
TS4

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000


STANDARD CALIBRATION CHECK PROCEDURE

7068
TS4
2-9-2016

QA Specialist Amy Rutre + 53546 AGENCY Tucson Police Department
DATE 2-5-16 TIME 1035
Intoxilyzer Serial # 80-002345 Location 000

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 102 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

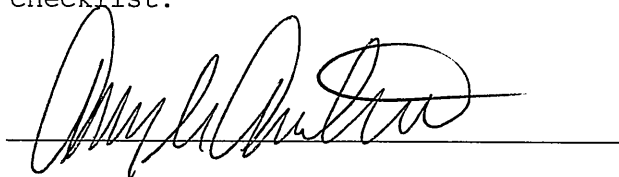

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

02/05/2016

10:35:08

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET #53546

QAS: A. AUTRET #53546

TUCSON PD

Operator: A. AUTRET #53546

TUCSON PD

Test	g/210L	Time
Air Blank	0.000	10:35:37
0.100 Cal Check	0.102	10:35:58
Air Blank	0.000	10:36:27

Preventative Maintenance

Performed -- Timer Reset

8 of 8
[Signature]
13h