



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
1306 W. Miracle Mile, Tucson, AZ 85705

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-002345 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

TSy
4-7-2016

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 3/31/2016 Cal 1 0.102 AC Cal 2 0.100 AC

Between the dates of 3/4/2016 and 3/31/2016 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on
The instrument was returned to service on

William L Loomis

William L. Loomis


4/4/2016

ADPS QAS Permit # 33720

SUBSCRIBED AND SWORN to before me this 4th day of April, 2016.

Elma Escarcega

Notary Public

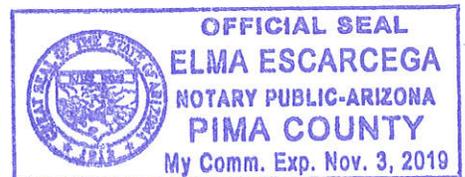

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

1 of 8  
WLL  
Bk 4.7.2016

QA SPECIALIST W. LOOMIS 53545 AGENCY Tucson Police Department

DATE 3/31/2016 TIME 12:39

INTOXILYZER SERIAL # 80-002345 LOCATION ODD

( ✓ ) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

( ✓ ) 1. Clock time check.

( ✓ ) 2. Date check.

OPERATIONAL TESTS

( ✓ ) 1. Alcohol-free subject test result 0. 000 AC.

( ✓ ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed

( ✓ ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.

( ✓ ) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 100 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE

Willie Loomis

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

03/31/2016

12:42:20

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

QAS: W. LOOMIS

#53545

TUCSON PD

Operator: W. LOOMIS

#53545

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1987

Sex: M

Weight: 222

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	12:43:16
Diagnostic Test	Pass	12:43:51
Air Blank	0.000	12:44:18
0.100 Cal Check	0.102	12:44:39
Air Blank	0.000	12:45:08
Subject Test	0.000	12:45:26
Air Blank	0.000	12:45:53
Wait	ABT*	
Air Blank	0.000	12:46:28

\*Sequence Aborted

2 of 8  
WLL  
Bh

**Not a Successfully Completed Test Sequence**

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

03/31/2016

12:46:32

---

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

---

QAS: W. LOOMIS

#53545

TUCSON PD

---

Operator: W. LOOMIS

#53545

TUCSON PD

---

Subject: SQAP, SQAP

DOB: 11/11/1987

Sex: M

Weight: 222

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	12:47:37
Diagnostic Test	Pass	12:48:12
Air Blank	0.000	12:48:40
0.100 Cal Check	RFI*	12:48:54
Air Blank	IPS**	12:49:03

\*RFI Detect

\*\*Improper Sample

3 of 8  
WLL  
Tdy

**Not a Successfully Completed Test Sequence**

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

03/31/2016

12:49:10

---

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

---

QAS: W. LOOMIS

#53545

TUCSON PD

---

Operator: W. LOOMIS

#53545

TUCSON PD

---

Subject: SQAP, SQAP

DOB: 11/11/1987

Sex: M

Weight: 222

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	12:50:33
Diagnostic Test	Pass	12:51:08
Air Blank	RFI*	12:51:30
Air Blank	0.000	12:51:58

\*RFI Detect

4 of 8  
WLL  
BY

### Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

03/31/2016

12:52:03

---

Standard Lot#: 25414100A4

Last Changed By: A. AUTRET

#53546

---

QAS: W. LOOMIS

#53545

TUCSON PD

---

Operator: W. LOOMIS

#53545

TUCSON PD

---

Subject: SQAP, SQAP

DOB: 11/11/1987

Sex: M

Weight: 222

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	12:53:02
Diagnostic Test	Pass	12:53:38
Air Blank	0.000	12:54:05
0.100 Cal Check	0.102	12:54:26
Air Blank	0.000	12:54:55
Subject Test	0.299*	12:58:03
Air Blank	0.000	12:58:36
Air Blank	0.000	12:59:03
Subject Test	XXX**	12:59:24
Air Blank	0.000	12:59:58

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

5 of 8  
0 WLL  
T54

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

03/31/2016

13:00:13

-----  
Standard Lot#: 25414100A4

Last Changed By: A. AUTRET #53546

-----  
QAS: W. LOOMIS #53545

TUCSON PD

-----  
Operator: W. LOOMIS #53545

TUCSON PD

-----  
Test                      g/210L                      Time  
-----  
Air Blank                      0.000                      13:00:44  
0.100 Cal Check              0.100                      13:01:04  
Air Blank                      0.000                      13:01:34

Preventative Maintenance  
Performed -- Timer Reset

6 of 8  
WLL  
TSh

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

7 of 8  
WLL  
TS4 4.7.2016

QA Specialist W. LOOMIS 53545 AGENCY Tucson Police Department  
DATE 3/31/2016 TIME 12:39  
Intoxilyzer Serial # 80-002345 Location ODD

- ( ✓ ) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- ( ✓ ) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ( ✓ ) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ( ✓ ) 4. Air blank completed.
- ( ✓ ) 5. Calibration check completed. Test results 0. 102 AC.
- ( ✓ ) 6. Air blank completed.
- ( ✓ ) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Willie Loomis

DPS Form Exh G-2 (Rev. 05-01)

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location:

Serial Number: 80-002345

Core Version: 8105.48

03/31/2016

12:39:54

-----  
Standard Lot#: 25414100A4

Last Changed By: A. AUTRET #53546

-----  
QAS: W. LOOMIS #53545

TUCSON PD

-----  
Operator: W. LOOMIS #53545

TUCSON PD

-----  
Test                      g/210L                      Time  
-----  
Air Blank                      0.000                      12:40:23  
0.100 Cal Check              0.102                      12:40:44  
Air Blank                      0.000                      12:41:14

Preventative Maintenance  
Performed -- Timer Reset

8 of 8  
TSG WLL