



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
270 S. Stone Avenue Tucson, AZ 85701-1917

By
8.3.2010

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-002759 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 07/29/10 Cal 1 0.098 AC Cal 2 0.099 AC

Between the dates of 07/01/10 and 07/29/10
the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.
The instrument was returned to service on N/A.

Cheryl K. Straub

Cheryl K. Straub


08/02/10

ADPS QAS Permit # 33408

SUBSCRIBED AND SWORN to before me this 2, day of August, 20 10.

A.M. Hernandez

Notary Public

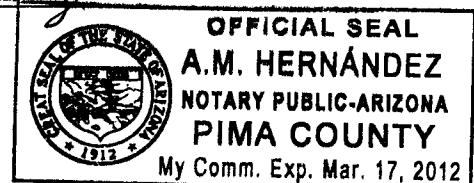

*Includes documents specified in A.A.C. R13-10-104.A.5

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Cheryl STRAUB AGENCY Tucson Police DepartmentDATE 07/29/10 TIME 05:53INTOXILYZER SERIAL # 80-002759 LOCATION TEAM 4

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
-
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0.
- 000
- AC.
-
- (✓) 2. Error recognition logic system functioning.
-
- Not a Successfully Completed Test Sequence printed
-
- (✓) 3. Proper sample recognition system.
-
- Not a Successfully Completed Test Sequence printed
-
- Deficient sample printed.
-
- (✓) 4. Standard Calibration Check standard 0.
- 100
- AC
-
- Result: 0.
- 099
- AC

Instrument is operating properly and accurately. YES ✓ NO

COMMENTS

SIGNATURE Cheryl Straub

DPS Form Exh G-4 (Rev. 05-01)

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in
computer storage devices of the Tucson Police Department.

277
CS

INTOXILYZER 8000

Location:

Serial Number : 80-002759

07/29/2010

05:56:14

134

Standard Lot#: 719919

Last Changed By: C. CONLEY

#34517

QAS: C. STRAUB

#50772

TUCSON PD

Operator: C. STRAUB

#50772

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	05:57:15
Diagnostic Test	Pass	05:57:43
Air Blank	0.000	05:58:10
0.100 Cal Check	0.099	05:58:29
Air Blank	0.000	05:58:58
Subject Test	0.000	05:59:30
Air Blank	ABT*	05:59:37
Air Blank	0.000	06:00:05

*Sequence Aborted

Not a Successfully Completed Test Sequence

387
05

INTOXILYZER 8000

Location:

Serial Number : 80-002759

07/29/2010

06:00:40

TS4

Standard Lot#: 719919

Last Changed By: C. CONLEY

#34517

QAS: C. STRAUB

#50772

TUCSON PD

Operator: C. STRAUB

#50772

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	06:01:19
Air Blank	IPS**	06:01:27

*RFI Detect

**Improper Sample

Not a Successfully Completed Test Sequence

487
CS

INTOXILYZER 8000

Location:

Serial Number : 80-002759

07/29/2010

06:01:34

154

Standard Lot#: 719919

Last Changed By: C. CONLEY

#34517

QAS: C. STRAUB

#50772

TUCSON PD

Operator: C. STRAUB

#50772

TUCSON PD

Subject: SQAP, SQAP

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	06:02:28
Diagnostic Test	Pass	06:02:55
Air Blank	0.000	06:03:23
0.100 Cal Check	0.098	06:03:41
Air Blank	0.000	06:04:11
Subject Test	0.267*	06:07:19
Air Blank	0.000	06:07:52
Air Blank	0.000	06:08:19
Subject Test	XXX**	06:08:59
Air Blank	0.000	06:09:33

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

577
CS

134

INTOXILYZER 8000

Location:

Serial Number: 80-002759

07/29/2010

06:09:59

Standard Lot#: 719919

Last Changed By: C. CONLEY #34517

QAS: C. STRAUB #50772

TUCSON PD

Test	g/210L	Time
Air Blank	0.000	06:10:26
Cal Check	0.099	06:10:45
Air Blank	0.000	06:11:14


Operator's Signature

677
CSTHIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

By
8.3-2010

QA Specialist Cheryl STRAUB AGENCY Tucson Police Department
DATE 07/29/10 TIME 05:53
Intoxilyzer Serial # 80-002759 Location TEAM 4

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution N/A AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 098 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

Cheryl Straub

DPS Form Exh G-2 (Rev. 05-01)

777
CS

TS4

INTOXILYZER 8000

Location:

Serial Number: 80-002759

07/29/2010

05:53:22

Standard Lot#: 719919

Last Changed By: C. CONLEY #34517

QAS: C. STRAUB #50772

TUCSON PD

Test	g/210L	Time
Air Blank	0.000	05:53:50
Cal Check	0.098	05:54:09
Air Blank	0.000	05:54:38



Operator's Signature