



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
1306 W. Miracle Mile, Tucson, AZ 85705

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-002759 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

SC
11/1/12

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 10-18-2012 Cal 1 0.097 AC Cal 2 0.096 AC

Between the dates of 9-20-2012 and 10-18-2012 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on —.
The instrument was returned to service on —.


Terry S. Gallegos

10-30-2012

ADPS QAS Permit # 33169

SUBSCRIBED AND SWORN to before me this 30th, day of October, 2012.

Notary Public

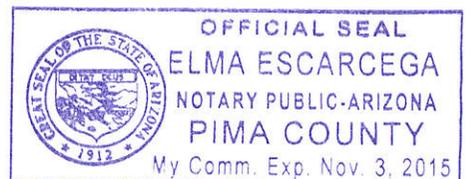

*Includes documents specified in A.A.C. R13-10-104.A.5

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

1 of 7
TS4

SC
11/1/12

QA SPECIALIST Terry Gallegos 28847 AGENCY Tucson Police Department

DATE 10-18-2012 TIME 0903

INTOXILYZER SERIAL # 80-002759 LOCATION ODE

() 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- () 1. Clock time check.
- () 2. Date check.

OPERATIONAL TESTS

- () 1. Alcohol-free subject test result 0. 000 AC.
- () 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- () 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- () 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 096 AC

Instrument is operating properly and accurately. YES NO

COMMENTS

SIGNATURE Terry Gallegos

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000

Location:

Serial Number : 80-002759

10/18/2012

09:05:39

2 of 7
TS4

Standard Lot#: 23511100A2

Last Changed By: T. GALLEGOS

#28847

QAS: T. GALLEGOS

#28847

TUCSON PD

Operator: T. GALLEGOS

#28847

TUCSON PD

Subject: TEST, SQAP

DOB: 11/11/1987

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:06:30
Diagnostic Test	Pass	09:06:58
Air Blank	0.000	09:07:25
0.100 Cal Check	0.096	09:07:44
Air Blank	0.000	09:08:13
Subject Test	0.000	09:08:40
Air Blank	0.000	09:09:07
Five Minute Wait	ABT*	
Air Blank	0.000	09:09:42

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location:
Serial Number : 80-002759
10/18/2012

09:10:31

307
TS4

Standard Lot#: 23511100A2
Last Changed By: T. GALLEGOS #28847

5C

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:11:24
Diagnostic Test	Pass	09:11:51
Air Blank	0.000	09:12:19
0.100 Cal Check	0.096	09:12:37
Air Blank	RFI*	09:12:48
Air Blank	IPS**	09:12:57

*RFI Detect
**Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location:
Serial Number : 80-002759
10/18/2012

09:13:10

40F7
TS4

SC

Standard Lot#: 23511100A2
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:14:14
Diagnostic Test	Pass	09:14:41
Air Blank	0.000	09:15:09
0.100 Cal Check	0.097	09:15:27
Air Blank	0.000	09:15:57
Subject Test	0.335*	09:19:05
Air Blank	0.000	09:19:38
Air Blank	0.000	09:20:05
Subject Test	XXX**	09:20:31
Air Blank	0.000	09:21:04

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

INTOXILYZER 8000

Location:

Serial Number: 80-002759

10/18/2012

09:21:22

50F7

TS4

SC

Standard Lot#: 23511100A2

Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847

TUCSON PD

Test	g/210L	Time
Air Blank	0.000	09:21:49
Cal Check	0.096	09:22:08
Air Blank	0.000	09:22:37


Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

6 of 7
TS4
SC
11/1/12

QA Specialist Terry Gallegos 28847 AGENCY Tucson Police Department
DATE 10-18-2012 TIME 0903
Intoxilyzer Serial # 80-002759 Location ODE

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 097 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

DPS Form Exh G-2 (Rev. 05-01)

