



CERTIFICATION by CUSTODIAN of RECORDS  
 Tucson Police Department Crime Laboratory  
 1306 W. Miracle Mile, Tucson, AZ 85705

TS4  
 5.7.2015

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-002759 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 4/30/2015 Cal 1 0.099 AC Cal 2 0.099 AC

Between the dates of 4/1/2015 and 4/30/2015 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on —.  
 The instrument was returned to service on —.

*Amy L. Autret*  
 Amy L. Autret


5-5-2015

ADPS QAS Permit # 33718

SUBSCRIBED AND SWORN to before me this 5th, day of May, 2015.

*Elma Escarcega*

Notary Public

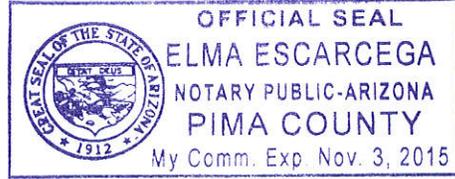

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

10F7  
AB

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

TJy  
5.7.2015

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Amy Detert 53546 AGENCY Tucson Police Department

DATE 4/30/2015 TIME 1541

INTOXILYZER SERIAL # 80-002759 LOCATION ODW

(  ) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (  ) 1. Clock time check.
- (  ) 2. Date check.

OPERATIONAL TESTS

- (  ) 1. Alcohol-free subject test result 0. 000 AC.
- (  ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (  ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (  ) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 099 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE 

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002759  
Core Version: 8105.48  
04/30/2015 15:43:26

2 of 7  
JLB  
TSY

Standard Lot#: 11514100A2  
Last Changed By: S. CIONE #50616

QAS: A. AUTRET #53546  
TUCSON PD

Operator: A. AUTRET #53546  
TUCSON PD

Subject: SQAP, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	15:44:26
Diagnostic Test	Pass	15:45:01
Air Blank	0.000	15:45:28
0.100 Cal Check	0.099	15:45:49
Air Blank	0.000	15:46:18
Subject Test	0.000	15:46:36
Air Blank	0.000	15:47:04
Wait	ABT*	
Air Blank	0.000	15:47:39

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002759  
Core Version: 8105.48  
04/30/2015

15:48:35

3.87  
MS  
PG

---

Standard Lot#: 11514100A2  
Last Changed By: S. CIONE #50616

---

QAS: A. AUTRET #53546  
TUCSON PD

---

Operator: A. AUTRET #53546  
TUCSON PD

---

Subject: SQAP, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	15:49:34
Diagnostic Test	Pass	15:50:09
Air Blank	0.000	15:50:36
0.100 Cal Check	RFI*	15:50:50
Air Blank	IPS**	15:50:59

\*RFI Detect  
\*\*Improper Sample

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002759  
Core Version: 8105.48  
04/30/2015

15:51:29

4 of 7  
JL  
TS

---

Standard Lot#: 11514100A2  
Last Changed By: S. CIONE #50616

---

QAS: A. AUTRET #53546  
TUCSON PD

---

Operator: A. AUTRET #53546  
TUCSON PD

---

Subject: SQAP, SQAP  
DOB: 11/11/1987  
Sex: F Weight: 111

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	15:52:25
Diagnostic Test	Pass	15:53:00
Air Blank	0.000	15:53:27
0.100 Cal Check	0.099	15:53:48
Air Blank	0.000	15:54:18
Subject Test	0.208*	15:57:25
Air Blank	0.000	15:57:58
Air Blank	0.000	15:58:25
Subject Test	XXX**	15:58:49
Air Blank	0.000	15:59:23

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002759  
Core Version: 8105.48  
04/30/2015 16:00:23

5 of 7  
JL  
TS4

-----  
Standard Lot#: 11514100A2  
Last Changed By: S. CIONE #50616  
-----

QAS: A. AUTRET #53546  
TUCSON PD  
-----

Operator: A. AUTRET #53546  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	16:00:54
0.100 Cal Check	0.099	16:01:15
Air Blank	0.000	16:01:44

Preventative Maintenance  
Performed -- Timer Reset

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

60F7  
JLD

ARIZONA DEPARTMENT OF PUBLIC SAFETY


STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

TJL  
5-7-2015

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Amy Autret 53546 AGENCY Tucson Police Department  
DATE 4/30/2015 TIME 1541  
Intoxilyzer Serial # 80-002759 Location OPW

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 099 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

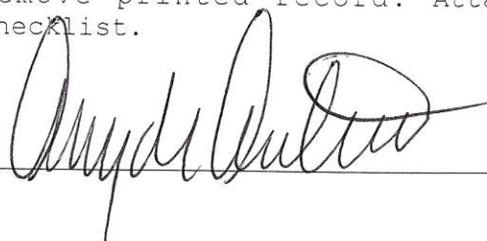SIGNATURE 

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location: TUCSON PD  
Serial Number: 80-002759  
Core Version: 8105.48  
04/30/2015 15:41:27

70F7  
ds  
TS4

-----  
Standard Lot#: 11514100A2  
Last Changed By: S. CIONE #50616  
-----

QAS: A. AUTRET #53546  
TUCSON PD  
-----

Operator: A. AUTRET #53546  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	15:41:58
0.100 Cal Check	0.099	15:42:19
Air Blank	0.000	15:42:48

Preventative Maintenance  
Performed -- Timer Reset