



CERTIFICATION by CUSTODIAN of RECORDS  
 Tucson Police Department Crime Laboratory  
 270 S. Stone Avenue Tucson, AZ 85701-1917

SC  
 11/21/08

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-002803 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 11-20-08 Cal 1 0.098 AC Cal 2 0.098 AC

Between the dates of 10-23-08 and 11-20-08 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.  
 The instrument was returned to service on N/A.

Clare Conley

Clare L. Conley


11-20-08

ADPS QAS Permit # 33314

SUBSCRIBED AND SWORN to before me this 20th, day of November, 2008.

A.M. Hernandez

Notary Public

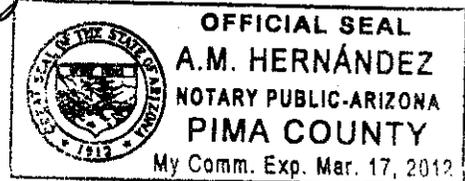

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

1 of 10  
cu

sc  
11/21/08

QA SPECIALIST Clare Conley AGENCY Tucson Police Department

DATE 11-20-08 TIME 1008

INTOXILYZER SERIAL # 80-002803 LOCATION ODW DUI HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 098 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS None  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE Clare Conley

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number : 80-002803  
11/20/2008

10:09:44

25810  
em

Standard Lot#: 735401G  
Last Changed By: S. CIONE #50616

5C

QAS: C. CONLEY #34517  
TUCSON PD

Operator: C. CONLEY #34517  
TUCSON PD

Subject: TEST, SQAP

DOB: 11/11/1111

Sex: M

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:10:31
Diagnostic Test	Pass	10:10:58
Air Blank	0.000	10:11:26
0.100 Cal Check	0.099	10:11:45
Air Blank	0.000	10:12:14
Subject Test	DEF*	10:15:22
Air Blank	0.000	10:15:50
Air Blank	0.000	10:16:17
Subject Test	ABT**	10:16:33
Air Blank	0.000	10:17:01

\*Deficient Sample

\*\*Sequence Aborted

**Not a Successfully Completed Test Sequence**



TUCSON POLICE DEPARTMENT  
CRIME LABORATORY

35610  
cu

INTOXILYZER SERVICE RECORD  
FOR  
CALIBRATION GAS TANK CHANGE

SC  
11/21/08

Date: 11-20-08  
QAS: Clare Conley  
Intoxilyzer Serial Number: 80-002803  
New Lot Number: 804302I  
New Expiration Date: 17 Feb 10

- (✓) 1. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 2. Remove the old gas tank and install the new one.
- (✓) 3. Hit the "ESC" key twice and swipe the QAS card.
- (✓) 4. Go to the "M-Maintenance" menu and select "S-Standard Change." Select "D" for dry gas and enter the following information:  
 Enter Target Value: 0.100  
 Enter Control Lot #: From the tank label  
 Enter Exp Date: From the tank label (mm/dd/yyyy)  
 Edit info Y/N? Y or N  
 Update Std Info? Y ENTER  
 "Please wait saving..."
- (✓) 5. Hit the "ESC" key twice.
- (✓) 6. Go to the "M-Maintenance" menu and select "T-Control Testing." Select "D" for dry control test. After selection is made press ENTER.
- (✓) 7. Air blank completed.
- (✓) 8. Calibration check completed. Test results 0. 100 AC.
- (✓) 9. Air blank completed.
- (✓) 10. Remove and sign printed record. Attach the record to the completed checklist.

SIGNATURE Clare Conley

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number: 80-002803  
11/20/2008 10:20:38

45810  
Cu  
JC

-----  
Standard Lot#: 804302I  
Last Changed By: C. CONLEY #34517  
-----

QAS: C. CONLEY #34517  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	10:21:06
Cal Check	0.100	10:21:24
Air Blank	0.000	10:21:54

*Clare Conley*

\_\_\_\_\_  
Operator's Signature

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number : 80-002803  
11/20/2008

10:22:51

5/10  
cu  
SC

Standard Lot#: 804302I  
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517  
TUCSON PD

Operator: C. CONLEY #34517  
TUCSON PD

Subject: TEST, SQAP  
DOB: 11/11/1111  
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:23:43
Diagnostic Test	Pass	10:24:10
Air Blank	0.000	10:24:38
0.100 Cal Check	0.101	10:24:56
Air Blank	0.000	10:25:26
Subject Test	0.000	10:25:53
Air Blank	ABT*	10:26:00
Air Blank	0.000	10:26:28

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number : 80-002803  
11/20/2008

10:26:31

b 5/10  
em  
SC

Standard Lot#: 804302I  
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517  
TUCSON PD

Operator: C. CONLEY #34517  
TUCSON PD

Subject: TEST, SQAP  
DOB: 11/11/1111  
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	10:27:04
Air Blank	IPS**	10:27:12

\*RFI Detect  
\*\*Improper Sample

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number : 80-002803  
11/20/2008

10:27:17

7 of 10  
on  
SC

Standard Lot#: 804302I  
Last Changed By: C. CONLEY #34517

QAS: C. CONLEY #34517  
TUCSON PD

Operator: C. CONLEY #34517  
TUCSON PD

Subject: TEST,SQAP  
DOB: 11/11/1111  
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:28:08
Diagnostic Test	Pass	10:28:36
Air Blank	0.000	10:29:03
0.100 Cal Check	0.100	10:29:22
Air Blank	0.000	10:29:51
Subject Test	0.486*	10:33:00
Air Blank	0.000	10:33:36
Air Blank	0.000	10:34:03
Subject Test	XXX**	10:34:29
Air Blank	0.000	10:35:04

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number: 80-002803  
11/20/2008 10:35:21

8/10  
cu

-----  
Standard Lot#: 804302I  
Last Changed By: C. CONLEY #34517  
-----

SC

-----  
QAS: C. CONLEY #34517  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	10:35:48
Cal Check	0.098	10:36:07
Air Blank	0.000	10:36:37


  
-----  
Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

95610  
lu  
5C

QA Specialist Clare Conley AGENCY Tucson Police Department  
DATE 11-20-08 TIME 1008  
Intoxilyzer Serial # 80-002803 Location ODW DUI HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 098 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Clare Conley

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000  
Location: ARIZONA  
Serial Number: 80-002803  
11/20/2008 10:08:23

10/20/10  
Cu

-----  
Standard Lot#: 735401G  
Last Changed By: S. CIONE #50616  
-----

SC

-----  
QAS: C. CONLEY #34517  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	10:08:50
Cal Check	0.098	10:09:09
Air Blank	0.000	10:09:39

Clare Conley  
Operator's Signature