



CERTIFICATION by CUSTODIAN of RECORDS
 Tucson Police Department Crime Laboratory
 1306 W. Miracle Mile, Tucson, AZ 85705

SC
 12/10/14

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-006048 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 11-6-2014 Cal 1 0.100 AC Cal 2 0.098 AC

Between the dates of 10-9-2014 and 11-6-2014 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on .
 The instrument was returned to service on .

Terry Gallegos

Terry S. Gallegos

12-4-2014

ADPS QAS Permit # 33169

SUBSCRIBED AND SWORN to before me this 24th, day of December, 2014.

Elma Escarcega

Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

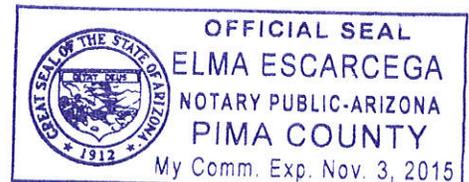


EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

10f7
TS4

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

SC
12/10/14

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Terry Gallegos 28847 AGENCY Tucson Police Department
DATE 11-6-2014 TIME 1553
INTOXILYZER SERIAL # 80-006048 LOCATION ODW-DWI-HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 098 AC

Instrument is operating properly and accurately. YES NO

COMMENTS _____

SIGNATURE Terry Gallegos

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-006048
Core Version: 8105.48
11/06/2014

15:55:36

2 of 7
TS4
SC

Standard Lot#: 25913100A2
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

| Test | g/210L | Time |
|-----------------|--------|----------|
| Air Blank | 0.000 | 15:56:37 |
| Diagnostic Test | Pass | 15:57:12 |
| Air Blank | 0.000 | 15:57:39 |
| 0.100 Cal Check | 0.098 | 15:58:00 |
| Air Blank | 0.000 | 15:58:29 |
| Subject Test | 0.000 | 15:59:54 |
| Air Blank | 0.000 | 16:00:21 |
| Wait | ABT* | |
| Air Blank | 0.000 | 16:00:55 |

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-006048
Core Version: 8105.48
11/06/2014

16:01:05

30f7
TS4
SC

Standard Lot#: 25913100A2
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

| Test | g/210L | Time |
|-----------------|--------|----------|
| Air Blank | 0.000 | 16:01:54 |
| Diagnostic Test | Pass | 16:02:29 |
| Air Blank | 0.000 | 16:02:56 |
| 0.100 Cal Check | RFI* | 16:03:13 |
| Air Blank | IPS** | 16:03:20 |

*RFI Detect

**Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-006048
Core Version: 8105.48
11/06/2014

16:03:24

4 of 7
TS4
SC

Standard Lot#: 25913100A2
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1987
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

| Test | g/210L | Time |
|-----------------|--------|----------|
| Air Blank | 0.000 | 16:04:14 |
| Diagnostic Test | Pass | 16:04:49 |
| Air Blank | 0.000 | 16:05:16 |
| 0.100 Cal Check | 0.099 | 16:05:37 |
| Air Blank | 0.000 | 16:06:06 |
| Subject Test | 0.151* | 16:09:14 |
| Air Blank | 0.000 | 16:09:48 |
| Air Blank | 0.000 | 16:10:16 |
| Subject Test | XXX** | 16:11:12 |
| Air Blank | 0.000 | 16:11:46 |

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-006048
Core Version: 8105.48
11/06/2014 16:13:10

5077
TSh
SL

Standard Lot#: 25913100A2
Last Changed By: T. GALLEGOS #28847

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

| Test | g/210L | Time |
|-----------------|--------|----------|
| Air Blank | 0.000 | 16:13:39 |
| 0.100 Cal Check | 0.098 | 16:14:00 |
| Air Blank | 0.000 | 16:14:29 |

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

6 of 7
TS4

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

SC
12/10/14

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Terry Gallegos 28847 AGENCY Tucson Police Department
DATE 11-6-2014 TIME 1553
Intoxilyzer Serial # 80-006048 Location ODW-DUE HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 100 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Terry Gallegos

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000
Location: TUCSON PD
Serial Number: 80-006048
Core Version: 8105.48
11/06/2014 15:53:56

7077
TS4

Standard Lot#: 25913100A2
Last Changed By: T. GALLEGOS #28847

5C

QAS: T. GALLEGOS #28847
TUCSON PD

Operator: T. GALLEGOS #28847
TUCSON PD

| Test | g/210L | Time |
|-----------------|--------|----------|
| Air Blank | 0.000 | 15:54:25 |
| 0.100 Cal Check | 0.100 | 15:54:46 |
| Air Blank | 0.000 | 15:55:16 |

Preventative Maintenance
Performed -- Timer Reset