



CERTIFICATION by CUSTODIAN of RECORDS
Tucson Police Department Crime Laboratory

34

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 5000 Serial Number 66-005003 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.080AC solution are 0.070AC to 0.090AC.

Date: 9/1/06 Cal 1 0.079 AC Cal 2 0.078 AC

Date: 9/28/06 Cal 1 0.077 AC Cal 2 0.077 AC

Date: N/A Cal 1 AC Cal 2 AC

Between the dates of 9/1/06 and 9/28/06 the instrument was operating properly and accurately.


The instrument was taken out of service for repair on N/A.
The instrument was returned to service on N/A.

Jennifer L. Coombs
Jennifer L. Coombs

10/17/06

ADPS QAS Permit # QAS 29886

SUBSCRIBED AND SWORN to before me this 17, day of October, 2006.

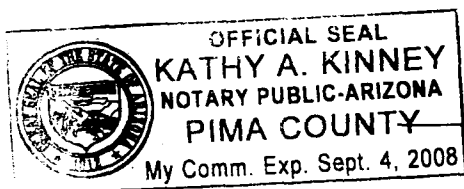

Kathy A. Kinney
Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 5000*

STANDARD QUALITY ASSURANCE PROCEDURE *67*

1. f. l. 6
file

QA SPECIALIST Jennifer Coombs 46160 AGENCY Tucson Police Department
DATE September 28, 2006 TIME 1219
INTOXILYZER SERIAL # 66-005003 LOCATION ODW

- (✓) 1. Display reads "READY TO START" or "PUSH BUTTON TO START TEST."

DIAGNOSTIC TESTS

- (✓) 1. DVM Test check. Setting should be between .010 and .600. Mode selection switch S2 on, S1 and S3 off or keyboard menu selection "H". Reading is .346.
(✓) 2. Display Test check. Mode selection switch S1 on and S2 and S3 off or keyboard menu selection "V".
(✓) 3. Printer Test check. Mode selection switch S1, S2, S3 off or keyboard menu selection "P".
(✓) 4. Clock time check. Mode selection switch S10 on or keyboard menu selection "E".
(✓) 5. Date check. Mode selection switch S11 on or keyboard menu selection "E".

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject Test result 0.000 AC
(✓) 2. Error recognition logic system functioning
Invalid test printed
(✓) 3. Proper sample recognition system
Invalid sample printed ✓
Deficient sample printed ✓
(✓) 4. Standard Calibration Check standard 0.080 AC
Results: 0.077 AC & 0.077 AC

Instrument operating accurately and properly. YES ✓ NO

COMMENTS:

SIGNATURE

Jennifer L. Coombs

*WITH OR WITHOUT VAPOR RECIRCULATION AND WITH OR WITHOUT KEYBOARD

DPS Form Exh E-4 (Rev. 05-1)

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

Tucson Police Department Crime Laboratory

3 of 6
By JLC

TUCSON POLICE DEPARTMENT
INTOXILYZER - ALCOHOL ANALYZER
AZ MODEL 5000
09/28/06
12:29

TEST
AIR BLANK
CAL. CHECK
AIR BLANK

BRAC VALUE
TIME
12:28
12:29
12:29
12:29

SUBJECT'S NAME
ODW
INSTRUMENT LOCATION

TIME FIRST OBSERVED

46160

OPERATOR
ADDITIONAL INFORMATION AND/OR REMARKS



INTOXILYZER® INSTRUMENT PRINTER CARD

© 1986 by CMI INC.

TUCSON POLICE DEPARTMENT
INTOXILYZER - ALCOHOL ANALYZER
AZ MODEL 5000
09/28/06
12:29

TEST
AIR BLANK
CAL. CHECK
AIR BLANK

BRAC VALUE
TIME
12:28
12:29
12:29
12:29

SUBJECT'S NAME

ODW
INSTRUMENT LOCATION

TIME FIRST OBSERVED

46160

OPERATOR
ADDITIONAL INFORMATION AND/OR REMARKS



INTOXILYZER® INSTRUMENT PRINTER CARD

© 1986 by CMI INC.

4 of 6
PS Jli

EN 86-94864-
E767.14
INVALID TEST

GS 485.04
12124

SAMPLE INTRODUCED
AT IMPROPER TIME.

SUBJECT'S NAME

TIME FIRST OBSERVED

ODW
INSTRUMENT LOCATION

46160
OPERATOR

ADDITIONAL INFORMATION AND/OR REMARKS

INTOXILYZER[®] INSTRUMENT PRINTER CARD

EMI_{INC.}

© 1986 by CMI INC.

EXHIBIT E-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 5000*

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST Jennifer Coombs 46160 AGENCY Tucson Police Department
DATE September 28, 2006 TIME 1219
INTOXILYZER SERIAL # 66-005003 LOCATION CDW

5 of 6
Bh jll

- (✓) 1. Pour a standard alcohol concentration solution into a clean dry simulator jar and assemble the simulator. Ensure that a tight seal has been made. Standard value: 0. 080 AC.
- (✓) 2. Turn on the simulator and allow the temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$.
- (✓) 3. Set Intoxilyzer mode selection in the ACA mode by switching mode selection switch #9 on or selecting "C" on keyboard menu.
- (✓) 4. Attach simulator to the simulator entrance port on the Intoxilyzer.
- ✓ (✓) 5. Intoxilyzer 5000 display reads "READY TO START" or "PUSH BUTTON".
- ✓ (✓) 6. Push Start Test button or press enter on keyboard.
- ✓ (✓) 7. Insert card in response to display.
- ✓ (✓) 8. Air blank completed.
- ✓ (✓) 9. Standard Calibration Check completed. Test results 0. 077 AC & 0. 077 AC.
- ✓ (✓) 10. Air blank completed.
- ✓ (✓) 11. When test complete, remove printed record. Attach the record to the completed checklist.
- (✓) 12. Return mode selection switch #9 to off position after all calibration checks are complete or type Q and enter on keyboard.

SIGNATURE

Jennifer L Coombs

*WITH OR WITHOUT VAPOR RECIRCULATION AND WITH OR WITHOUT KEYBOARD

DPS Form Exh E-2 (Rev. 05-1)

TUCSON POLICE DEPARTMENT
INTOXILYZER - AIRBORNE ANALYZER
A2 MODEL 5000 SN 66-005003
09/28/06 12:30

TEST BRAC VALUE TIME
AIR BLANK .000 12:31
*SUBJECT TEST .151 12:34
AIR BLANK .000 12:34

* DEFICIENT SAMPLE - VALUE
PRINTED WAS HIGHEST OBTAINED.

SUBJECT'S NAME
TIME FIRST OBSERVED
INSTRUMENT LOCATION

46160
OPERATOR
ADDITIONAL INFORMATION AND/OR REMARKS



INTOXILYZER® INSTRUMENT PRINTER CARD

© 1986 by CMI INC.

TUCSON POLICE DEPARTMENT
INTOXILYZER - AIRBORNE ANALYZER
A2 MODEL 5000 SN 66-005003
09/28/06 12:25

TEST BRAC VALUE TIME
AIR BLANK .000 12:24
INVALID SAMPLE .000 12:24
AIR BLANK .000 12:25

BEGIN NEW DEPRIVATION PERIOD

SUBJECT'S NAME
TIME FIRST OBSERVED
INSTRUMENT LOCATION

46160
OPERATOR
ADDITIONAL INFORMATION AND/OR REMARKS

Sweet Breath



INTOXILYZER® INSTRUMENT PRINTER CARD

© 1986 by CMI INC.