



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory  
270 S. Stone Avenue Tucson, AZ 85701-1917

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-000332 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

TS6  
2/17/09

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 2/12/09 Cal 1 0.098 AC Cal 2 0.097 AC

Between the dates of 1/14/09 and 2/12/09 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on -.  
The instrument was returned to service on -.

Sarah Cione

Sarah L. Cione


2/17/09

ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 17<sup>th</sup>, day of February, 20 09.

A Hernandez

Notary Public

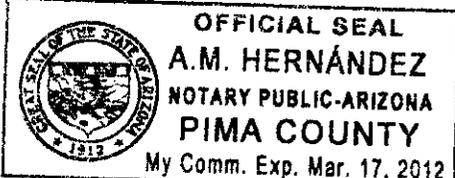

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

1 of 7 sc

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD QUALITY ASSURANCE PROCEDURE

TS4  
2.17.09

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department  
DATE 2/12/09 TIME 7:57  
INTOXILYZER SERIAL # 80-000332 LOCATION DUI HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 097 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

SIGNATURE Sarah Cione

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number : 80-000332  
02/12/2009

07:58:56

2 of 7 sc

BY

Standard Lot#: 808101G  
Last Changed By: C. ANDREACOLA #27359

QAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SQAP, TEST

DOB: 11/11/1111

Sex: F

Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	07:59:39
Diagnostic Test	Pass	08:00:07
Air Blank	0.000	08:00:34
0.100 Cal Check	0.098	08:00:53
Air Blank	0.000	08:01:23
Subject Test	0.000	08:01:47
Air Blank	0.000	08:02:14
Five Minute Wait	ABT*	
Air Blank	0.000	08:02:49

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number : 80-000332  
02/12/2009

08:02:53

3 of 7 SC  
154

Standard Lot#: 808101G  
Last Changed By: C. ANDREACOLA #27359

QAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SQAP, TEST  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	08:03:17
Air Blank	IPS**	08:03:26

\*RFI Detect  
\*\*Improper Sample

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number : 80-000332  
02/12/2009 08:03:58

4 of 7 SC

Standard Lot#: 808101G  
Last Changed By: C. ANDREACOLA #27359

134

QAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SQAP,TEST  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:05:06
Diagnostic Test	Pass	08:05:34
Air Blank	0.000	08:06:01
0.100 Cal Check	0.099	08:06:20
Air Blank	0.000	08:06:49
Subject Test	0.059*	08:09:58
Air Blank	0.000	08:10:30
Air Blank	0.000	08:10:57
Subject Test	XXX**	08:11:26
Air Blank	0.000	08:12:00

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-000332  
02/12/2009 08:12:26

5 of 7 sc

-----  
Standard Lot#: 808101G  
Last Changed By: C. ANDREACOLA #27359  
-----

134

-----  
QAS: S. CIONE #50616  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	08:12:54
Cal Check	0.097	08:13:13
Air Blank	0.000	08:13:42

*Sarah Cione*

\_\_\_\_\_  
Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

6 of 7 sc

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

TS4  
2-17-09

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Sarah Cione AGENCY Tucson Police Department  
DATE 2/12/09 TIME 7:57  
Intoxilyzer Serial # 80-000332 Location DUT HQ

- ( / ) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- ( / ) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ( / ) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ( / ) 4. Air blank completed.
- ( / ) 5. Calibration check completed. Test results 0. 098 AC.
- ( / ) 6. Air blank completed.
- ( / ) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-000332  
02/12/2009 07:57:28

7 of 7 sc

-----  
Standard Lot#: 808101G  
Last Changed By: C. ANDREACOLA #27359  
-----

AB4

-----  
QAS: S. CIONE #50616  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	07:57:55
Cal Check	0.098	07:58:14
Air Blank	0.000	07:58:44

Sarah Cione  
Operator's Signature