



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
270 S. Stone Avenue Tucson, AZ 85701-1917

TS4
10-18-2010

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-000712 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 10-14-10 Cal 1 0.104 AC Cal 2 0.099 AC

Between the dates of 9-16-10 and 10-14-10 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on N/A.
The instrument was returned to service on N/A.

Clare Conley

Clare L. Conley

10-15-10

ADPS QAS Permit # 33314

SUBSCRIBED AND SWORN to before me this 15, day of October, 2010.

Laura B. Hodgson

Notary Public

*Includes documents specified in A.A.C. R13-10-104.A.5

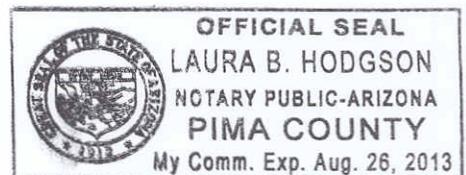


EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD QUALITY ASSURANCE PROCEDURE

1567
cu
154
10-18-2010

QA SPECIALIST Clare Conley AGENCY Tucson Police Department
DATE 10-14-10 TIME 0929
INTOXILYZER SERIAL # 80000712 LOCATION ODW DUI HQ

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 099 AC

Instrument is operating properly and accurately. YES NO

COMMENTS None.

SIGNATURE Clare Conley

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000712
10/14/2010 09:31:01

2067
CW
B4

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:31:49
Diagnostic Test	Pass	09:32:16
Air Blank	0.000	09:32:44
0.100 Cal Check	0.098	09:33:02
Air Blank	0.000	09:33:32
Subject Test	0.000	09:33:52
Air Blank	ABT*	09:33:58
Air Blank	0.000	09:34:26

*Sequence Aborted

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000712
10/14/2010 09:34:56

367
cu
B4

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:35:43
Diagnostic Test	Pass	09:36:11
Air Blank	0.000	09:36:38
0.100 Cal Check	0.099	09:36:57
Air Blank	RFI*	09:37:17
Air Blank	IPS**	09:37:39

*RFI Detect
**Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000712
10/14/2010 09:38:06

487
cu
B4

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524

QAS: C. CONLEY #34517
TUCSON PD

Operator: C. CONLEY #34517
TUCSON PD

Subject: TEST, SQAP
DOB: 11/11/1111
Sex: M Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:38:59
Diagnostic Test	Pass	09:39:27
Air Blank	0.000	09:39:54
0.100 Cal Check	0.099	09:40:13
Air Blank	0.000	09:40:43
Subject Test	0.109*	09:43:51
Air Blank	0.000	09:44:23
Air Blank	0.000	09:44:50
Subject Test	XXX**	09:45:21
Air Blank	0.000	09:45:53

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000712
10/14/2010 09:47:53

5067
CW
154

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524

QAS: C. CONLEY #34517
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	09:48:20
Cal Check	0.099	09:48:39
Air Blank	0.000	09:49:09

C. Conley
Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

b. 6/7
CW
TS4
10.18.2010

QA Specialist Clare Conley AGENCY Tucson Police Department
DATE 10-14-10 TIME 0929
Intoxilyzer Serial # 80-000712 Location ODW DM HQ

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 104 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Clare Conley

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000

Location: TUCSON POLICE DEPT

Serial Number: 80-000712

10/14/2010

09:29:39

Standard Lot#: 719919

Last Changed By: S. CLEARY #44524

QAS: C. CONLEY #34517

TUCSON PD

Test g/210L Time

Air Blank 0.000 09:30:06
Cal Check 0.104 09:30:25
Air Blank 0.000 09:30:55

7567
cu

134

Clare Conley

Operator's Signature