



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
1306 W. Miracle Mile, Tucson, AZ 85705

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-000712 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

TS9
11.7.2011

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 10/14/11 Cal 1 0.097 AC Cal 2 0.097 AC

Between the dates of 9/15/11 and 10/14/11 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on -.
The instrument was returned to service on -.

Sarah Cione

Sarah L. Cione


10/27/11

ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 27, day of October, 20 11.

A.M. Hernandez

Notary Public

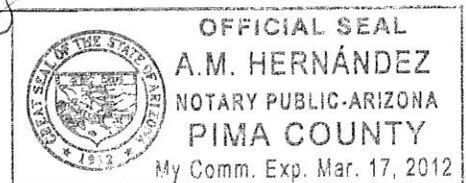

*Includes documents specified in A.A.C. R13-10-104.A.5

1 of 7 sc

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

754
11.7.2011

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department

DATE 10/14/11 TIME 943

INTOXILYZER SERIAL # 80-000712 LOCATION Team 2 - ODW

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC
Result: 0. 097 AC

Instrument is operating properly and accurately. YES NO

COMMENTS

SIGNATURE Sarah Cione

2 of 7sc

B4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000712
10/14/2011

09:45:07

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524
QAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:45:50
Diagnostic Test	Pass	09:46:18
Air Blank	0.000	09:46:45
0.100 Cal Check	0.097	09:47:04
Air Blank	0.000	09:47:33
Subject Test	0.000	09:47:52
Air Blank	0.000	09:48:20
Five Minute Wait	ABT*	
Air Blank	0.000	09:48:55

*Sequence Aborted

Not a Successfully Completed Test Sequence

3 of 7sc

TS4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000712
10/14/2011

09:49:02

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524
QAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:49:47
Diagnostic Test	Pass	09:50:15
Air Blank	0.000	09:50:42
0.100 Cal Check	RFI*	09:50:56
Air Blank	IPS**	09:51:04

*RFI Detect
**Improper Sample

Not a Successfully Completed Test Sequence

4 of 7sc

TS4

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number : 80-000712
10/14/2011

09:51:25

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524

QAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	09:52:19
Diagnostic Test	Pass	09:52:47
Air Blank	0.000	09:53:14
0.100 Cal Check	0.098	09:53:33
Air Blank	0.000	09:54:03
Subject Test	0.046*	09:57:11
Air Blank	0.000	09:57:43
Air Blank	0.000	09:58:10
Subject Test	XXX**	09:58:28
Air Blank	0.000	09:59:01

*Deficient Sample
**Invalid Sample
Begin new deprivation period

Not a Successfully Completed Test Sequence

5 of 7_{sc}

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000712
10/14/2011 09:59:25

TS4

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524

QAS: S. CIONE #50616
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	09:59:52
Cal Check	0.097	10:00:11
Air Blank	0.000	10:00:41

Sarah Cione

Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

T54
11.7.2011

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist Sarah Cione AGENCY Tucson Police Department
DATE 10/14/11 TIME 943
Intoxilyzer Serial # 80-000712 Location Team 2-0DW

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 097 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

DPS Form Exh G-2 (Rev. 05-01)

7 of 7 sc

INTOXILYZER 8000
Location: TUCSON POLICE DEPT
Serial Number: 80-000712
10/14/2011 09:43:32

TS4

Standard Lot#: 719919
Last Changed By: S. CLEARY #44524

QAS: S. CIONE #50616
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	09:44:00
Cal Check	0.097	09:44:18
Air Blank	0.000	09:44:48

Sarah Cione

Operator's Signature