



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory  
270 S. Stone Avenue Tucson, AZ 85701-1917

TS4  
6.9.2010

I hereby certify that these documents are a true and correct copy of the periodic maintenance\* for the Intoxilyzer 8000 Serial Number 80-001199 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 5/30/10 Cal 1 0.101 AC

Date: 6/4/10 Cal 1 0.101 AC Cal 2 0.099 AC

Between the dates of 4/29/10 and 5/30/10 the instrument was operating properly and accurately.

The instrument was taken out of service for repair on -.  
The instrument was returned to service on -.

Sarah Cione

Sarah L. Cione


6/9/10

ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 9, day of June, 20 10.

Amy Hernandez

Notary Public

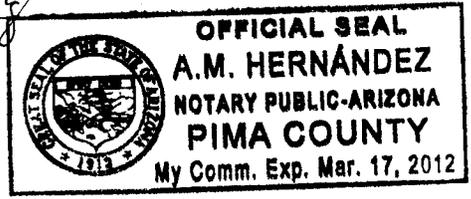

\*Includes documents specified in A.A.C. R13-10-104.A.5

EXHIBIT G-4

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

1 of 10 sc

T84  
6.9.2010

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department

DATE 6/4/2010 TIME 1445

INTOXILYZER SERIAL # 80-001199 LOCATION Vehicle #942

( ✓ ) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- ( ✓ ) 1. Clock time check.
- ( ✓ ) 2. Date check.

OPERATIONAL TESTS

- ( ✓ ) 1. Alcohol-free subject test result 0. 000 AC.
- ( ✓ ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed
- ( ✓ ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.
- ( ✓ ) 4. Standard Calibration Check standard 0. 100 AC  
Result: 0. 099 AC

Instrument is operating properly and accurately. YES  NO

COMMENTS

---



---



---



---

SIGNATURE Sarah Cione

2 of 10<sub>sc</sub>

184

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-001199  
06/04/2010 14:47:07

-----  
Standard Lot#: 642845  
Last Changed By: J. OLIVARES #36552  
-----

OAS: S. CIONE #50616  
TUCSON PD  
-----

Operator: S. CIONE #50616  
TUCSON PD  
-----

Subject: SOAP, SOAP  
DOB: 11/11/1111  
Sex: F Weight: 111  
-----

15 Minute Deprivation Period? Yes  
-----

Test	g/210L	Time
Air Blank	0.000	14:47:55
Diagnostic Test	Pass	14:48:24
Air Blank	0.000	14:48:51
0.100 Cal Check	0.099	14:49:10
Air Blank	0.000	14:49:39
Subject Test	0.000	14:49:54
Air Blank	0.000	14:50:21
Five Minute Wait	ABT*	
Air Blank	0.000	14:50:58

\*Sequence Aborted

Not a Successfully  
Completed  
Test Sequence

3 of 10<sub>sc</sub>  
154

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-001199  
06/04/2010 14:51:08

Standard Lot#: 642845  
Last Changed By: J. OLIVARES #36552

OAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SOAP, SOAP  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	AMB*	14:51:57
Air Blank	RFI**	14:52:13

\*Ambient Fail  
\*\*RFI Detect

Not a Successfully  
Completed  
Test Sequence

4 of 10 sc  
154

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-001199  
06/04/2010 14:52:24

Standard Lot#: 642845  
Last Changed By: J. OLIVARES #36552

OAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SOAP, SOAP  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	14:53:00
Air Blank	0.000	14:53:29

\*Improper Sample

Not a Successfully  
Completed  
Test Sequence

5 of 10<sub>sc</sub>

B4

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-001199  
06/04/2010 14:53:34

Standard Lot#: 642845  
Last Changed By: J. OLIVARES #36552

OAS: S. CIONE #50616  
TUCSON PD

Operator: S. CIONE #50616  
TUCSON PD

Subject: SOAP, SOAP  
DOB: 11/11/1111  
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	14:54:23
Diagnostic Test	Pass	14:54:52
Air Blank	0.000	14:55:19
0.100 Cal Check	0.100	14:55:38
Air Blank	0.000	14:56:07
Subject Test	0.133*	14:59:15
Air Blank	0.000	14:59:47
Air Blank	0.000	15:00:14
Subject Test	XXX**	15:00:33
Air Blank	0.000	15:01:06

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

Not a Successfully  
Completed  
Test Sequence

6 of 10 sc

TS4

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-001199  
06/04/2010 15:01:29

-----  
Standard Lot#: 642845  
Last Changed By: J. OLIVARES #36552  
-----

OAS: S. CIONE #50616  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	15:01:57
Cal Check	0.099	15:02:15
Air Blank	0.000	15:02:45

-----  
*Sarah Cione*  
Operator's Signature  
-----

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD CALIBRATION CHECK PROCEDURE

7 of 10 SC  
TSY  
6.9.2010

QA Specialist Sarah Cione AGENCY Tucson Police Department  
DATE 6/4/2010 TIME 1445  
Intoxilyzer Serial # 80-001199 Location Vehicle 942

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 101 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

DPS Form Exh G-2 (Rev. 05-01)

8 of 10<sub>sc</sub>

PH

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-001199  
06/04/2010 14:45:22

-----  
Standard Lot#: 642845  
Last Changed By: J. OLIVARES #36552  
-----

OAS: S. CIONE #50616  
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	14:45:49
Cal Check	0.101	14:46:08
Air Blank	0.000	14:46:37

*Sarah Cione*  
-----  
Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY  
A.A.C. R13-10-104(A)

9 of 10 SC

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

BY  
6.9.2010

STANDARD CALIBRATION CHECK PROCEDURE

QA Specialist MORANO AGENCY Tucson Police Department

DATE 053010 TIME 0057

Intoxilyzer Serial # 80.001199 Location VEH 942 SPEEDWAY/SUPERZEE


- (X) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.

OR

Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

- (X) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (X) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (X) 4. Air blank completed.
- (X) 5. Calibration check completed. Test results 0. 101 AC.
- (X) 6. Air blank completed.
- (X) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE

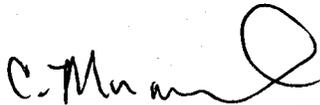

DPS Form Exh G-2 (Rev. 05-01)

10 of 10<sub>sc</sub>  
134

INTOXILYZER 8000  
Location: TUCSON POLICE DEPT  
Serial Number: 80-001199  
05/30/2010 00:56:47

-----  
Standard Lot#: 642845  
Last Changed By: J. OLIUARES #36552  
-----

QAS: C. MORAND #24219  
TUCSON PD  
-----

Test	g/210L	Time
Air Blank	0.000	00:57:15
Cal Check	0.101	00:57:33
Air Blank	0.000	00:58:03

-----  
*C. Morand 24219*  
Operator's Signature  
-----