



CERTIFICATION by CUSTODIAN of RECORDS

Tucson Police Department Crime Laboratory
270 S. Stone Avenue Tucson, AZ 85701-1917

TS4
8-23-2010

I hereby certify that these documents are a true and correct copy of the periodic maintenance* for the Intoxilyzer 8000 Serial Number 80-002201 maintained by the Tucson Police Department Crime Laboratory pursuant to the requirements of the Arizona Department of Public Safety for a quality assurance program.

A quality assurance specialist (QAS) tested the instrument on the following dates. The acceptable accuracy limits, as defined in A.A.C. R13-10-104.A.2, for a 0.100AC solution are 0.090AC to 0.110AC.

Date: 8/19/10 Cal 1 0.101 AC Cal 2 0.101 AC

Between the dates of - and - the instrument was operating properly and accurately.

The instrument was taken out of service for repair on -
The instrument was returned to service on 8/19/10

Sarah Cione

Sarah L. Cione


8/23/10

ADPS QAS Permit # 33355

SUBSCRIBED AND SWORN to before me this 23 day of August, 2010.

A.M. Hernandez

Notary Public

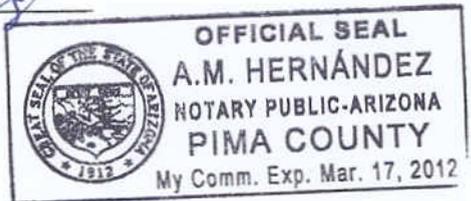

*Includes documents specified in A.A.C. R13-10-104.A.5

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

1 of 12x

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

TS4
8.23.2010

QA SPECIALIST Sarah Cione AGENCY Tucson Police Department

DATE 8/19/10 TIME 1557

INTOXILYZER SERIAL # 80-002201 LOCATION Crime Lab

(✓) 1. Display reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (✓) 1. Clock time check.
- (✓) 2. Date check.

OPERATIONAL TESTS

- (✓) 1. Alcohol-free subject test result 0. 000 AC.
- (✓) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- (✓) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- (✓) 4. Standard Calibration Check standard 0. 100 AC.
Result: 0. 101 AC

Instrument is operating properly and accurately. YES NO

COMMENTS

SIGNATURE Sarah Cione

2 of 12 sc
124

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-002201
08/19/2010 15:59:18

Standard Lot#: 719919
Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	16:00:03
Diagnostic Test	Pass	16:00:31
Air Blank	0.000	16:00:58
0.100 Cal Check	0.101	16:01:17
Air Blank	0.000	16:01:46
Subject Test	0.000	16:02:07
Air Blank	0.000	16:02:35
Five Minute Wait	ABT*	
Air Blank	0.000	16:03:10

*Sequence Aborted

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

3 of 12_{sc}

154

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-002201
08/19/2010 16:03:25

Standard Lot#: 719919
Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	16:04:09
Diagnostic Test	Pass	16:04:37
Air Blank	RFI*	16:05:02
Air Blank	IPS**	16:05:11

*RFI Detect
**Improper Sample

Not a Successfully Completed Test Sequence

Pursuant to section 28-1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

4 of 12 sc

ASH

INTOXILYZER 8000
Location: ARIZONA
Serial Number : 80-002201
08/19/2010

16:05:15

Standard Lot#: 719919
Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616
TUCSON PD

Operator: S. CIONE #50616
TUCSON PD

Subject: SQAP, SQAP
DOB: 11/11/1111
Sex: F Weight: 111

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	16:05:58
Diagnostic Test	Pass	16:06:26
Air Blank	0.000	16:06:53
0.100 Cal Check	0.102	16:07:12
Air Blank	0.000	16:07:41
Subject Test	0.085*	16:10:50
Air Blank	0.000	16:11:21
Air Blank	0.000	16:11:49
Subject Test	XXX**	16:12:07
Air Blank	0.000	16:12:40

*Deficient Sample

**Invalid Sample

Begin new deprivation period

Not a Successfully Completed Test Sequence

5 of 12 sc

INTOXILYZER 8000
Location: ARIZONA
Serial Number: 80-002201
08/19/2010 16:13:09

TS4

Standard Lot#: 719919
Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	16:13:37
Cal Check	0.101	16:13:55
Air Blank	0.000	16:14:25

Sarah Cione

Operator's Signature

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY
A.A.C. R13-10-104(A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

6 of 12 SC
TSY
8-23-2010

QA Specialist Sarah Cione AGENCY Tucson Police Department
DATE 8/19/10 TIME 1557
Intoxilyzer Serial # 80-002201 Location Crime Lab

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0. 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 101 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

DPS Form Exh G-2 (Rev. 05-01)

INTOXILYZER 8000
Location: ARIZONA
Serial Number: 80-002201
08/19/2010 15:57:51

7 of 12 sc

BH

Standard Lot#: 719919
Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	15:58:18
Cal Check	0.101	15:58:37
Air Blank	0.000	15:59:06

Sarah Cione
Operator's Signature



TUCSON POLICE DEPARTMENT
CRIME LABORATORY

8 of 12 sc

INTOXILYZER SERVICE RECORD
FOR
CALIBRATION GAS TANK CHANGE

By
8.23.2010

Date: 8/19/10

QAS: Sarah Cione

Intoxilyzer Serial Number: 80-002201

New Lot Number: 719919

New Expiration Date: 2/2/2012

- (✓) 1. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 2. Remove the old gas tank and install the new one.
- (✓) 3. Hit the "ESC" key twice and swipe the QAS card.
- (✓) 4. Go to the "M-Maintenance" menu and select "S-Standard Change." Select "D" for dry gas and enter the following information:
 Enter Target Value: 0.100
 Enter Control Lot #: From the tank label
 Enter Exp Date: From the tank label (mm/dd/yyyy)
 Edit info Y/N? Y or N
 Update Std Info? Y ENTER
 "Please wait saving..."
- (✓) 5. Hit the "ESC" key twice.
- (✓) 6. Go to the "M-Maintenance" menu and select "Control Testing." Select "D" for dry control test. After selection is made press ENTER.
- (✓) 7. Air blank completed.
- (✓) 8. Calibration check completed. Test results 0. 101 AC.
- (✓) 9. Air blank completed.
- (✓) 10. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Sarah Cione

INTOXILYZER 8000
Location: ARIZONA
Serial Number: 80-002201
08/19/2010 15:56:06

9 of 12 sc

SM

Standard Lot#: 719919
Last Changed By: S. CIONE #50616

QAS: S. CIONE #50616
TUCSON PD

Test	g/210L	Time
Air Blank	0.000	15:56:33
Cal Check	0.101	15:56:52
Air Blank	0.000	15:57:22

Sarah Cione

Operator's Signature



TUCSON POLICE DEPARTMENT
CRIME LABORATORY

10 of 12_{sc}

INTOXILYZER SERVICE RECORD

TS4
8.23.2010

QAS: Sarah Cione

Intoxilyzer Serial Number: 80-002201

Date Returned to Service: 8/19/10

INTOX
PBT
TOXITEST

DATE	7-26-10
RECEIVED VIA	FEDX

CMI INC.

316 E. 9th St., Owensboro, KY 42303
270-685-6200 — Fax 270-685-6288
1-800-835-0690

SERVICE WORK ORDER

324514 11of12

B
I
L
L
T
O

ATTN:

CITY STATE ZIP

CUSTOMER NO. 105075

PHONE

S
H
I
P
T
O

Tucson Police Dept. 8-23-2010

ATTN: Terry Gallegos

270 S. Stone Ave.

Crime Lab

CITY STATE ZIP
Tucson AZ 85701

PHONE
520-837-7677

MODEL # 8000	S/N 80-002201	DATE RCVD.	P.O. #	REQ.	BILL CODE 1	SERVICE LOCATION CODE
-----------------	------------------	------------	--------	------	----------------	-----------------------

PROD. CODE EXTRA PARTS RCVD.
FEET in bag, BT, 800 shelf, new battery

DESCRIPTION OF PROBLEM
Regulator Base will not stay attached to instrument

QUOTE WARRANTY SERVICE DEPT. NEW

- PRELIMINARY TEST DISMANTLE, INSPECT, DIAGNOSTIC TEST
- POWER SUPPLY TEST, INSPECT REPLACE
- MAIN PWB's - REMOVE & CLEAN, REINSTALL, TEST
- PWB's DIAGNOSE, REPAIR REPLACE
- PWB's - SURFACE CLEAN IN PLACE
- FILTER WHEEL - REMOVE, CLEAN, REINSTALL, CHECK CELL INTERIOR
- CHOPPER WHEEL MOTOR TEST & INSPECT REPLACE
- CELL - REMOVE, CLEAN, REINSTALL, REPLACE LENSES/GASKETS REQ'D
- IR LIGHT SOURCE REMOVE, REALIGN REPLACE
- PRINTER ASSY. DISASSEMBLE CLEAN & LUBRICATE
- REMOVE & REPLACE BELT REALIGNMENT
- REPLACE TEST PRINTER FUNCTIONS
- BATTERIES - REPLACE CPU RAM
- REPLACE PARTS REASSEMBLE CALIBRATION FINAL TEST
- MISC.
- PBT PRELIMINARY TESTING - PRESSURE, BATTERY, ZERO SET
- DISASSEMBLE REPLACE PARTS REASSEMBLE
- TEST CALIBRATE FINAL TEST
- TOXITEST INCOMING LEAK TEST VISUAL/MECH. INSPECTION
- TEST THERMOMETER & THERMOSTAT DISASSEMBLE
- REPLACE PARTS REASSEMBLE OUTGOING & LEAK TEST
- FINAL TEST
- MISC.

PARTS USED			
QTY	ID NO.	DESCRIPTION	CODE
1	44098905	Chassis Assy.	

COMMENTS:
Pulled parts listed

HOURS: 4.5 hr

TECH. K A-J DATE 8/2/10 CAL. TECH. KC DATE 8/11/10

FORM # CMI 8WO 1 REV (-)

Pursuant to Section 28.1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.

SPECIAL SHIPPING INSTRUCTIONS

COD AMOUNT \$

12 of 12 SC

154

Certificate of Calibration

Intoxilyzer® 8000

*This is to certify that the calibration of **Intoxilyzer**® serial number 80-002201, manufactured by CMI Inc., a subsidiary of MPD, Inc. of Owensboro, Kentucky, was tested and found to be in compliance with the National Highway Traffic Safety Administration Standard for Devices to Measure Breath Alcohol (F.R., No. 179 48705-48710 Sept. 17, 1993) and with International Recommendation OIML R126 Edition 1998 (E). Calibration solutions are traceable to NIST standard material 1828.*

Date 8/4/10 Signed Kristi Robinson
Technician

CMI INC.

316 East 9th Street
Owensboro, KY 42303
USA

Part No. 650519 CMI 7/9/09

Pursuant to Section 28.1327, Arizona Revised Statutes, this document is a certified duplicate of the information contained in computer storage devices of the Tucson Police Department.